BREWER MKIII SPECTROPHOTOMETER

(DOUBLE SPECTROMETER)
Operator's Manual



- If the computer is *not* configured to boot-up, then insert a boot disk supplied with the computer (*not* the Brewer software disk) and boot the computer.
 Wait until the computer is ready, and proceed to Step 4.
- If MS-DOS is not yet installed on the computer, refer to the computer suppliers
 diskettes and manual to install MS-DOS an GWBASIC.EXE. These are
 normally installed in the C:\DOS directory
- 4. Remove any disk in the disk drive, and insert the Brewer software disk.
- 5. Type the following commands to copy the Brewer software to your hard drive:

```
a:
cd\
install nnn d:\brewer d:\bdata (where nnn = instrument #)
```

If you wish to install the Brewer software to the default directories C:\BREWER and C:\BDATA, you can simply type

install

Edit the AUTOEXEC.BAT file and the BREWER.BAT file (found in directory c:\) as follows:

Edit the path= line (if present) to include the directory that you run the Brewer software from.

Ensure that the first cd line contains the directory name where the Brewer software is stored. This directory path should also appear on the set BREWDIR= line (note the capital letters!).

Here is an example AUTOEXEC.BAT file, with comments to help explain it:

Note that other lines may also appear here, but they should not be changed. The changes to BREWER.BAT should be identical, except that the path= line will not appear in the file.

7. Edit the CONFIG.SYS file if necessary. Changes may not be required; refer to your MS-DOS manual for more information.

)

)

ì

The computer is now properly set up. Please proceed to Section 6.4 to configure the program to work with your specific Brewer model.

6.4 Configuring the Brewer Software for the First Time

Before you can run the Brewer software, two important files must be edited: the operating state file (found in \BREWER and \BDATA\###), and the instruments constants file (found in \BDATA\###). To edit these files, refer to the following table to determine what values you need to provide. The left column lists the actual value written in the OP_ST.### file. The middle column is the BASIC variable name used in the Brewer software to contain this value, and the right column is a description of the value's meaning. The OP_ST.FIL in the program directory contains only the first two entries, instrument # and data directory.

Sample Value	SW Variable	Explanation	
046	NO\$	This is the ID number for your Brewer. This value is also used as a subdirectory name for all instrument data. This value MUST be correct in both operating state files before you run the Brewer software for the first time!	
\BDATA	DD\$	This is the directory to store all instrument data in. If you wish to store data on a different drive, that information can be entered here (i.e. D:\BDATA). Ensure that this value is correct in both operating state files before you run the Brewer software for the first time!	
ICFVAL	ICF\$	This is the default filename for the instrument constants file. This value should never need changing, since the program allows you to change the filename whenever you edit the constants file with the CF routine.	
ZSFVAL	ZSF\$	This is the default filename for the zenith sky coefficients file, and should not normally be changed.	
DCFVAL	DCF\$	This is the default filename for the dispersion constants file, and should not normally be changed.	
UVRES	UVR\$	This is the filename of the UV response file.	
04	DA\$	Calendar day. This value, and the next two, can be changed by using the DA command from within the main program.	
02	MO\$	Month	
94	YE\$	Year	
Saskatoon	LO\$	Location of Brewer instrument.	
52.108	L1\$	Latitude of instrument.	
106.713	L2\$	Longitude of instrument.	

Sample Value	SW Variable	Explanation	
960	L3\$	Average climatic station pressure	
		(millibars).	
1.8	TE\$	Voltage representation of Brewer	
		temperature.	
215	NC%	Azimuth north correction.	
0	HC%	Zenith horizon correction.	
14689	SR%	Azimuth steps per revolution.	
1	Q1%	Zenith drive present. Setting this value	
		to 1 means that the drive is present, and	
		a setting of 0 means it is not present.	
1	Q2%	Azimuth drive present. Set to 1 or 0 as	
	A-197	above.	
11	Q3%	Iris present. Set as above.	
1	Q4%	Filterwheel #1 present. Set as above.	
1	Q5%	Filterwheel #2 present. Set as above.	
1	Q6%	Clock board present. Set as above.	
1 .	Q7%	A/D board present. Set as above.	
1	Q8%	UVB port present. Set as above.	
1	Q9%	Filterwheel #3 present. Set as above.	
1	Q10%	New or old temperature circuit present.	
	Set to 1 for a new temperat		
		and 0 for an old circuit.	
1	Q11%	Second film polarizer present. Set as	
		described in Q1%	
0	Q12%	Set to 1 to enable NOBREW operation,	
		and 0 to disable it. This mode is	
		intended for training or testing purposes,	
		when no Brewer is connected to the	
		computer. If a Brewer is connected, this	
	0.4.00/	value should always be set to 0.	
1	Q13%	Wide HG slit present. Always set this to 1 on new Brewers.	
0	Q14%	New Brewer electronics board. This	
		should always be zero unless you have	
		upgraded to the new electronics.	
0	Q15%	Future use.	
skc/menu	DI\$	Schedule or menu indicator. Do not	
	- -	modify.	
O3	MDD\$	Mode.	
UMKNO2	SK\$	Schedule name.	

The ICFVAL.NNN is the instrument constants file. All of these values can be edited within the program by using the CF routine. However, two of the values MUST be correct before the software will run properly. These values are listed here:

Entry Position	Value	Description	
Line 23 of file	mkiv	This is the Brewer type. Its value MUST be one of "mkii", "mkiii", or "mkiv" (without the quotation marks). Note that the entry must be in lowercase, and that it must not contain any spaces.	
Line 24 of file	1	This entry is the COM port that the Brewer is is connected to. This is normally either 1 or 2.	

6.5 Editing the Brewer Software

If you intend to alter the Brewer software, then please note the following:

- Always create a backup copy of your software before you change anything!
- The Brewer main program is called MAIN.BAS. To change this routine, enter GWBASIC and type LOAD"MAIN.BAS". After changes are made, use SAVE"MAIN.BAS" to save the changes you made.
- To change any modules, use the command LOAD"<file>.RTN", where <file> is
 the name you normally use to run the module. Modules must be saved in ASCII
 format, so save them with the command SAVE"<file>.RTN",A.

6.6 Printer Problems

If you are located in outside North America, you may need to change the printer page length. Line 13030 must be changed to read CHR\$(66) for North American length paper, and CHR\$(72) for European length paper.

this page left intentionally blank

UVB STABILITY MONITORING AND DATA ANALYSIS PROCEDURES

Table of Contents

			Page
1. U	VB Stab	ility Check Method	1-1
	1.1	Setup	1-1
	1.2	UL Data Analysis Programs	1-2
	1.3	UV Data Analysis Programs	1-2
	1.4	UX Data Analysis Programs	1-3
	1.5	XL Data Analysis Programs	1-3
	1.6	GS Data Analysis Programs	1-4
	17	File Structure	1_/

this page left intentionally blank

uvb. - 2

1. STABILITY CHECK METHOD

The following assumes SCI-TEC's portable UVB lamp assembly BA-126 is to be used. This assembly is intended for monitoring instrument stability and not to give an absolute responsivity calibration. It is recommended that NIST (or traceable to) 1000W lamps operated at 50cm distance from the teflon diffuser be used for absolute calibration.

1.1 Setup

There are four primary concerns when setting up for a UL or QS scan:

- 1. cleaning the UVB quartz dome
- 2. wavelength calibration
- 3. lamp positioning
- 4. warm-up time

The UVB quartz dome may be cleaned with distilled water and a soft dry lint-free cloth.

Before a series of UL or XL scans are performed, an HG test should be conducted and no more than 2 to 3 consecutive scans should be done without performing an HG test. This will ensure proper wavelength calibration when numerous scans are desired. An appropriate command sequence would be: "hgxlb1ulhg".

When facing the front of the Brewer, the lamp housing is positioned on top of the UVB quartz dome with the nylon legs snug up against the left edge of the Brewer cover. Sliding the lamp housing left and the nylon legs right and tightening the legs will ensure lateral repeatability. Remove the rectangular lamp cover located on top of the lamp housing by unscrewing the nylon thumb screw and insert the lamp into the 6 pin socket. The aluminum shield around the lamp is keyed with the housing to keep the lamp right side up.

Vertical repeatability is achieved by positioning the lamp filament on exactly the same axis defined by the two sight holes on each side of the lamp shield. This axis represents 5cm from the teflon diffuser. If the lamp needs re-positioning be sure to use a clean, non-oily object to move the lamp. Do not let your skin touch the lamp. Replace the lamp cover on the lamp housing.

The external tungsten-halogen lamp should be allowed to warm for at least 10 minutes and should be operated at a ambient temperature.

After ensuring the quartz dome is clean and allowing the appropriate warm up time for the lamp, the UL command(s) may be executed. It is important that the digital volt meter (DVM) be used to monitor the lamp voltage to 3 decimal places and be set to record the voltage during the UL scan. To set the DVM for three decimal places, hold the yellow button down, switch the DVM from the OFF position to the DC VOLTS position, hold the yellow button down for 2 more seconds then release it. To start recording, press the MIN/MAX button once. Retrieve and record the average voltage

after each scan (or set of scans) by pressing the hold button and then the MIN/MAX button 3 times. The desirable operating voltage is 12.000V +/-.002V. If necessary, voltage from the supply may be adjusted by a potentiometer accessible on the left side of the cavity where the lamp housing is stored in the power supply case.

Typically, 5 lamps accompany an external lamp power supply. It is recommended that bi-monthly lamp scans are taken with two of the 5 lamps and monthly lamp scans taken with a third lamp. The third lamp is used to judge the performance of the first two lamps. The remaining 2 lamps should be kept aside to replace any of the first 3 should discrepancies of more than 5% occur between the first 3.

1.2 UL Data Analysis Programs

BREWRESP.BAS is a BASIC program used to determine the responsivity of a Brewer with the aid of data from a calibrated external tungsten-halogen lamp. Requirements for program execution are a LAMP*.IRR file for each lamp used to create the UL file and the UL data for the appropriate Brewer. The output of this program is a new UVRES.### (response) file. It is recommended that the new response files be named with the format (UVRdddyy.###). This file should be compared to previous response files to determine if there has been a possible change in the performance of either Brewer electronics of optics. The response file is similar to the SL test results for keeping track of instrument stability. The response file is also accessed by the UV and UVSUM routines and UVDATFIL to calculate a damaging ultra-violet (DUV) amount for each scan and for the day. The most representative response file should be kept in the Brewer ozone program directory for use by the various routines.

The response file calculated each time will be affected by temperature (lower response with higher temperatures), lamp positioning, and power supply stability. Changes from accepted response values of more than 5% should prompt investigation into the discrepancy. Statistics from the response calculations should give percent standard deviations of <1.5% to be considered acceptable.

BREWIRR.BAS is also a BASIC program used to calculate irradiance files for an unknown external lamp. Requirements for this program are a LAMP*.IRR file for each calibrated lamp used and UL data recorded on the same Brewer by both types of lamps. Output from the program is a LAMP*.IRR (irradiance) file for the previously non-calibrated lamp. Statistics from the determination of an instrument response during the calculation of the uncalibrated lamp irradiance file should be examined closely. If % standard deviations of greater than 1.5 are observed, then generally other UL scans should be used to determine an appropriate irradiance file for the uncalibrated lamp.

1.3 UV Data Analysis Programs

AB_UVDAT.ASC processes the UVdddyy.### files in a similar fashion to the UV.RTN and the UVSUM.RTN except that integrated results are tabulated along with data from the individual wavelengths. AB_UVDAT, UVSUM.RTN and UV.RTN have a UVA correction built in to the weighting curves; calculated results represent both the UVB and UVA regions (290-400nm). Two data files are created by AB_UVDAT for each UV file processed; UVBdddyy.### and DUVdddyy.### (reference field definitions below). Two different action spectrums, Erythema and Diffey, are used separately to weight the UV scans. This program requires access

uvb.1. STABILITY CHECK METHOD - 2

to the appropriate instrument response file. The UVB and DUV files are easily imported into and conveniently manipulated within spread sheeting software.

AB_UVDAT.EXE is very similar to AB_UVDAT.ASC except that it's capable of processing many UV files during a single execution. A UVOAVG.### file is also produced or appended to by this program. Again the appropriate instrument response file is required.

The integration technique used in UV.RTN, UVSUM.RTN and AB_UVDAT is one of histogram summation with the following properties. The raw counts in the UV file are converted throughout to counts per second and corrected for instrument dead time. The average of the counts recorded at wavelengths <=292nm represent a dark count (noise) value and is subtracted from all other wavelengths. The corrected raw counts are then divided by the instrument response values and multiplied by the appropriate weighting value at each wavelength. Scan integration is then the sum of the histograms, each 0.5 nm wide and as high as the corrected weighted irradiance.

For the UVSUM.RTN, daily irradiance integration is the sum of histograms that are as wide as the time between consecutive scans and as high as the average of the irradiance of two consecutive scans. For AB_UVDAT daily irradiance integration is the sum of histograms that are as wide as the average of the difference of the time for the following and the previous scan and as high as the irradiance for that particular scan.

For more representative daily integral values it is recommended that UV scans be taken throughout the daylight hours at regular zenith angle intervals. Histogram summation starts at the time of the first UV scan and stops at the time of the last UV scan. On a clear day without variable clouds or other aerosols the energy curve assumes a normal distribution

1.4 UX Data Analysis Programs

)

RD_UX.BAS and its executable program, RD_UX.EXE, are used to reduce the UV data produced by the UA, UC, UF, or UX routines. Output may be chosen in W/m²/nm or in mW/m²/nm. RD_UX is also capable of processing external lamp scans from the XL routine to produce lamp irradiance files (mW/m²/nm). It is most conveniently run in the directory where the UVB data is stored. The routine asks for the instrument number, the type of scan (UA, UC, UF, UX or XL), the date the UVB scans were taken (dddyy) and the location of the UVRES_X.## file. If the type of scan is not a lamp scan, then the user will be asked whether or not to correct for stray light. The stray light correction subtracts the average of the counts received below 292.2 nm for each measurement. The processed file will be prefixed by the letter "p" such as, PUXdddyy.###. If individual files for each scan are desired, then answering "y" to the last prompt will produce files such as PUXdddNN.###, where NN is the sequence of the scan.

1.5 XL Data Analysis Programs

X_RESP.BAS and its executable program, X_RESP.EXE, are used to determine the extended responsivity (typically 2865-3630 Angstroms) of a Brewer with the aid of data from a calibrated tungsten-halogen lamp. The program requires a single LAMP*.IRX file for the lamp used to create the corresponding XL file. For each scan

of the external lamp in the XL file, an XRdddyy?.### response file is created. It is recommended that a number of scans of the external lamp be performed thus generating several XRdddyy?.### response files. The response files can then be averaged into a single response and compared to previous response files to determine if there has been a possible change in the performance of either the Brewer electronics or optics.

1.6 GS Data Analysis Programs

RD_GS.BAS and its executable program, RD_GS.EXE are used to determine the values of GS, the "Grating Slope", and GI, the "Grating Intercept" to insure that both gratings are synchronized during various scanning operations. The routine asks for the name of the gsdddyy.### data file and calculates the values of GS and GI which can be updated using the CF editor. It is recommended that several gsdddyy.### data files be analyzed before making a decision to update the values of GS and GI.

1.7 File Structure

)

The structure of the UL, LAMP, IRR, UVRES, UVB, DUV and UVOAVG files are as follows:

UL: (produced by UL.RTN)

Integration time, dead time, number of slit mask cycles, number of wavelengths observed in the 290-325 nm region, lamp number (i.d.), distance between filament and teflon diffuser, data header (date, location, latitude, longitude), voltage reading representative of Brewer temperature (PMT temperature), surface level atmospheric pressure (a constant), dark count; - the next four fields repeat 11 times - , decimal minutes since 00:00 hours, wavelength, micrometer step number, raw photon counts; - then - , dark count, - repeat 11 times again the fields - decimal minutes since 00:00 hours, wavelength, micrometer step number, raw photon counts.

LAMP: (from QS.RTN)

Julian day and year, distance of lamp filament to teflon diffuser, pmt temperature, dark count, next 11 fields are intensities at each of the 11 wavelengths, pseudo DUV calculation.

IRR: (from BREWIRR.BAS)

First row - lamp identification number Second row - distance between lamp filament and teflon diffuser Columns below - first wavelength then irradiance in milli watts per square metre

UVRES: (from BREWRESP.BAS)

There are two columns; first wavelength then responsivity in counts per milli watt per square metre per nanometre

UVB: (from AB_UVDAT.ASC/.EXE)

First row - decimal hours from 00:00 (GMT) First column - wavelength (angstroms) Other columns : one per scan taken as recorded in the UV data file - irradiance (watts per square metre per nanometre) Second last row - scan weighted (Erythema) UV (milli watts per square metre) Last row - scan weighted (Diffey) UV (milli-watts per square metre)

DUV: (from AB_UVDAT.ASC/.EXE)

First column - decimal hours from 00:00 (GMT) Row 1 column 2 - daily weighted (Erythema) UV (joules per square metre) Row 1 column 3 - daily weighted (Diffey) UV (joules per square metre) Remainder of column 2 - scan weighted (Erythema) UV (milli watts per square metre) Remainder of column 3 - scan weighted (Diffey) UV (milli watts per square metre) Note: the last two fields can be cross referenced with the bottom two rows of the UVB file.

UVOAVG: (from AB_UVDAT.EXE)

Julian day and year, daily weighted Erythema UV, daily weighted Diffey UV, length of day; defined as the time difference between the first and last scan in the particular UV file, the number of scans in the UV file, representative hour; defined as the average hour during which the UV scans were taken over the day

PUX, PUF, PUV, PUA: (from RD_UX.EXE)

First row - decimal hours from 00:00 (GMT) Header for each scan includes date, starting time (hour), ending time (hour), zenith angle, latitude, longitude, location name, instrument # and measurement type, Row 2 column 1 - GMT time in minutes, column 2 - Wavelength (Angstroms), column 3 - irradiance (w/m²/nm or mw/m²/nm, depending on selection during processing).

PXL: (from RD_UX.EXE)

)

First row - Lamp ###, Row 2 - distance in centimeters, Column 1 Row 3 - Wavelength (Angstroms), Row 4 - irradiance (mw/m²/nm).

this page left intentionally blank

BREWER SYSTEM DESCRIPTION & SPECIFICATIONS

Table of Contents

			Page
0.	Introduction	on	0-1
1.	Overview	and Specifications	1-1
	1.1	Spectrophotometer	1-1
	1.2	Option A: Automated Foreoptics	1-6
	1.3	Option B: Azimuth- and Zenith-Pointing System	1-6
	1.4	Option C: Ultraviolet-B Monitor	1-8
2.	Mechanica	al Construction	2-1
3.	Foreoptics	3	3-1
	3.1	Zenith Prism	3-2
	3.2	Lamp Assembly: Quartz-Halogen and Mercury Lamps	3-2
	3.3	Iris-Diaphragm Assembly	3-2
	3.4	Filterwheels	3-3
	3.5	Foreoptic Viewing Ports	3-3
	3.6	Rear Optics	3-4
4.	Spectromo	eter	4-1
	4.1	Entrance- and Exit-Slit Plates	4-1
	4.2	Correction Lens	4-1
	4.3	Spherical Mirror	4-2
	4.4	Diffraction Grating	4-2
	4.5	Micrometer	4-2
	4.6	Slit Mack Assembly	4-3

sds. - 1

5. Photo	pmultiplier	5-1		
Appendix A: Selected Parts List A-				
List of i	Figures			
sds.0-1	A Complete Brewer System	0-2		
sds.1-1	Top View of the Spectrophotometer	1-2		
sds.1-2	View of the Spectrophotometer with the Top Cover Removed	1-2		
sds.1-3	Plan View of the Major Optical Assemblies	1-3		
sds.1-4	End View of the Foreoptics with the UV-B Subassembly Installed	1-8		
sds.3-1	Diagrammatic View of the Optical Elements	3-1		
sds.4-1	Slit Mask Assembly	4-3		
List of	Γables			
sds.1-1	Spectrometer Targets for Various Zenith Angles	1-8		
sds.4-1	Slit Mask Position vs Selected Wavelength	4-4		

sds. - 2

j

0. Introduction

Ì

}

The Brewer MKIII Spectrophotometer is a scientific instrument which measures atmospheric ozone and sulphur dioxide by examining the absorption of specific ultraviolet wavelengths from the solar spectrum.

It is well recognized by the scientific community that marked fluctuations in atmospheric ozone and sulphur dioxide concentrations are linked to a variety of adverse environmental conditions. The ozone layer, which shields the Earth from the harmful effects of solar ultraviolet radiation, is believed to be vulnerable to attack by fluorocarbons and other effluents. Many scientists fear its depletion may irreversibly alter world climatic patterns. Atmospheric sulphur dioxide is closely associated with the 'acid rain' phenomenon which, like ozone depletion, has implications for the global environment.

Today's concern over the vulnerability of the ozone layer to destruction by atmospheric pollutants has increased the demand for high-quality, globally-distributed, total ozone measurements from a ground-based network of instrumentation. During the past one and a half decades the Atmospheric Environment Service of Environment Canada (AES) and the University of Toronto have conducted the development of the MKIII Brewer Spectrophotometer for the purpose of supplementing instrumentation in the World Ozone Network.

Though the Dobson instrument has served its purpose well since the 1930s, the Brewer Ozone Spectrophotometer is today becoming the instrument of choice for researchers measuring ozone and sulphur dioxide. At the request of the World Meteorological Organization, The instrument and its accompanying accessories are manufactured and marketed under license by SCI-TEC Instruments Inc. of Saskatoon, Saskatchewan, Canada. Ninety Brewer instruments have already been incorporated in the World Ozone Network and measurements are currently being taken at research establishments in more than thirty different countries.

The Brewer Spectrophotometer is the core component of a complete Brewer System which comprises the following items:

- * Brewer Spectrophotometer
- * IBM PC or compatible microcomputer
- * Printer dot matrix printer Centronics compatible parallel interface
- * Control software

The Brewer Spectrophotometer is normally supplied with automated iris & filter-wheel controls, azimuth & zenith trackers and a UVB monitor.

A complete Brewer System is illustrated in figure sds.0-1.

All of the above-mentioned items are available from SCI-TEC Instruments Inc., with the exception of the computer, and printer which should be obtained from a local PC computer dealer. The Brewer Spectrophotometer is supplied with a complete IBM BASIC program which controls all aspects of data collection and analysis. The PC is programmed to interact with an operator to control the Brewer in either a manual, a semi-automated, or fully-automated mode of operation.

In both manual and semi-automated modes the operator initiates a specific observation or instrument test by typing an instruction 'command code' on the PC keyboard. Raw data is automatically recorded on 3.5" diskettes, or stored on a hard disk drive for convenience and real-time ozone results can be printed on paper (hard copy).

In the fully-automated mode, the PC performs all operations. The Brewer is automatically set to the proper observation configuration, then follows a user-defined observation schedule. Data is stored and analyzed in the same manner as in the semi-automated mode.

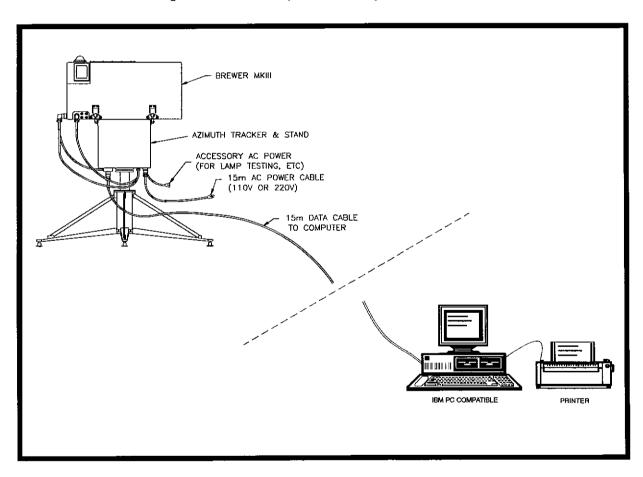


Figure sds.0-1 A Complete Brewer System

1. Overview and Specifications

The Brewer MKIII Spectrophotometer, hereafter referred to as the 'Brewer', is an optical instrument designed to measure ground-level intensities of the attenuated incident solar ultraviolet (UV) radiation at five specific wavelengths in the absorption spectra of ozone (O3) and sulphur dioxide (SO2). The Brewer contains a modified Ebert f/6 spectrometer with a 3600 line/mm holographic diffraction grating operated in the first order for O3/SO2.

The Brewer is designed for continuous outdoor operation and is therefore housed in a durable weatherproof shell which protects the finely-tuned internal components. The instrument will operate reliably and accurately over a wide range of temperature and humidity conditions.

In order to give the reader a broad understanding of how the Brewer functions, we briefly describe the major mechanical, optical, and electronic assemblies which make up the basic instrument, then discuss the three upgrade options. (More detailed expositions of the Brewer's optical components are provided in subsequent chapters; descriptions of the electronic assemblies are provided in the Brewer Maintenance Manual.

1.1 Spectrophotometer

)

The Brewer system comprises the Spectrophotometer, PC, and printer. These components when connected together provide for the complete operation of the system.


Figure sds.1-1 shows a top view of the left-hand corner of the Spectrophotometer. Sunlight enters the foreoptic system through the quartz inclined window. The instrument's display panel is visible through a perspex window which allows viewing of the two filterwheels and the iris lever. The entrance slit and the iris may be viewed through two viewing ports, also visible through the display panel viewing window.

When the cover is removed the various optical and electronic subassemblies are readily accessible. Refer to figure sds.1-2. Both the foreoptic and spectrometer subassemblies are kinematically mounted (ie mounted to avoid over-constrainment stresses) to a rigid support structure, while the photomultiplier subassembly is rigidly mounted to the support structure. This support structure is itself secured to the base of the external weatherproof container by three shock mounts to minimize mechanical vibrations

UV-B DOME GROUND QUARTZ NEUTRAL QUARTZ FILTER 2 FILTER 1 POWER SWITCH (O) \odot DATA CONNECTOR ENTRANCE-SLIT VIEWPORT IRIS LEVER AC POWER SOCKET -IRIS VIEWPORT QUARTZ WINDOW CONTROL SWITCHES AZIMUTH TRACKER SOCKET

Figure sds.1-1: Top view of the left-hand corner of the Spectrophotometer.



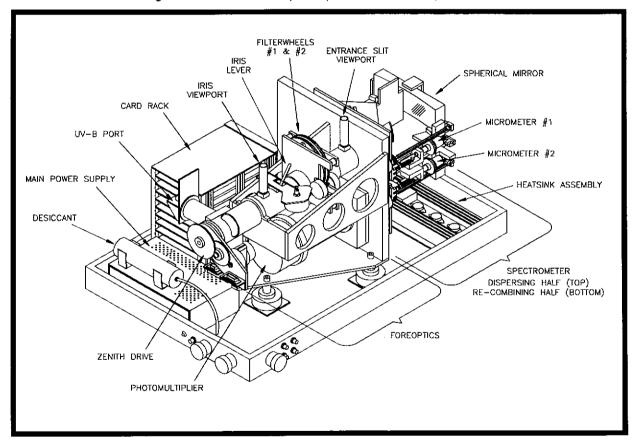

sds.1. Overview and Specifications - 2

Optics

)

The Brewer Spectrophotometer consists of three major optical assemblies: the foreoptics, the spectrometer and the photomultiplier. A plan view of the MKIII is shown in figure sds.1-3.

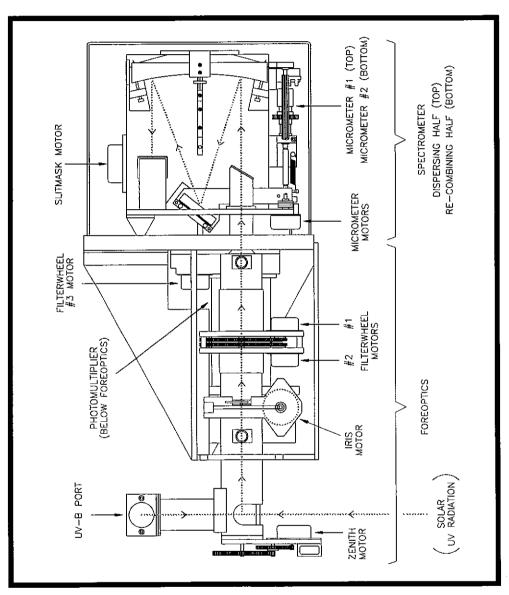


Figure sds.1-3: Plan view of the major optical assemblies. The stepper motors which drive the slit mask and micrometer are supplied with the basic instrument; the motors for the zenith prism, iris, and filterwheels are optional, as is the UV-B port. Filterwheel #3 is provided mainly for research purposes.

Incoming light is directed through the foreoptics by a director prism which may be rotated to select light from either the zenith sky, the direct sun, or one of the two calibration lamps. A mercury lamp provides a line source for wavelength calibration of the spectrometer; a halogen lamp provides a well-regulated light source so that the relative spectral response of the spectrometer may be monitored. Elements in the foreoptics provide adjustment for field-of-view, neutral-density attenuation, and ground-quartz diffusion, and selection of a film polarizer for zenith sky measurements.

A modified Ebert grating spectrometer disperses ultraviolet light onto a focal plane. Six exit slits are positioned along the focal plane at the operating wavelengths: 303.2 nm (302.1 nm for mercury-wavelength calibration), 306.3 nm, 310.1 nm, 313.5 nm, 316.8 nm and 320.1 nm in O₃ mode with 0.6 nm resolution. Wavelength is adjusted by rotating the grating with a stepper motor which drives a micrometer acting on a lever arm. The wavelength-calibration procedure is capable of measuring the wavelength setting with a precision of 0.0001 nm, and of controlling the wavelength setting to 0.007 nm.

The exit-slit plane is shielded by a cylindrical mask which exposes only one wavelength slit at a time. The mask is positioned by a stepper motor which cycles through all five operating wavelengths approximately once per second.

Light passing through the exit slits is collected on the cathode of a low-noise EMI 9789QB05 photomultiplier. The photon pulses are amplified, discriminated, and divided before being transmitted to a counter. The resulting photon count is registered in one of six wavelength channels.

Electronics

The Brewer Spectrophotometer contains its own microprocessor board, an RCA COSMAC 18S601, which controls all internal instrument operations.

Specifically, the microprocessor is responsible for -

- positioning the diffraction grating: the microprocessor controls a stepper motor which drives a micrometer connected by a lever arm to the grating
- * positioning the slit mask to allow light to pass through one of six exit-plane slits to the photomultiplier: this mask is driven by a second microprocessor-controlled stepper motor
- * synchronizing the photon-count circuitry with the movement of the slit mask
- turning the halogen and mercury calibration lamps on or off
- reading optical position sensors.

In addition, the microprocessor provides an RS-232C communications link to an external terminal or computer.

The microprocessor is programmed to accept commands from the external control console, execute the commands, and return results to the user. Normally an PC compatible computer is used as the control console to facilitate programmed command sequencing as well as automatic data logging and processing. Raw data is recorded on 5.25-inch / 3.5-inch diskettes or hard disk drive; real-time ozone results are printed on hard copy.

The major electronic subsystems of the instrument are listed below:

- Main and secondary power supplies
- * Microprocessor board carries control-program EPROMs (erasable programmable read-only memories), and a serial-communications interface which runs at 300 or 1200 bps (bits per second)
- * Input/Output Interface board provides on/off control of the calibration lamps; drives the wavelengh-micrometer stepper motor and slit mask stepper motor; reads photo-diode sensors
- * Photon Counter board provides the instrument's timebase and a remote-reset capability; accumulates the amplified and scaled photon count from the Pulse Amplifier, and transfers these counts to the microprocessor board
- * Clock-Calendar board contains a real-time clock and calendar, plus 2K bytes of RAM (read/write random-access memory) to save instrument-status settings when the instrument is turned off; the RAM and clock are battery-protected
- * Analog-to-Digital (A/D) board provides 16 single-ended, 8-bit A/D channels for monitoring instrument voltages, currents, and temperatures, plus two D/A (digital-to-analogue) channels permitting closed-loop computer control of instrument voltages (the D/A channels are not currently used)
- * Pulse Amplifier mounted in close proximity to the photomultiplier; amplifies and scales the photon-pulse signal from the photomultiplier, transmits the conditioned photon signal to the Photon Counter board.

With the exception of the power supplies and Pulse Amplifier, the electronic subsystems are mounted on cards which slide in a COSMAC-compatible cardframe and motherboard.

Specifications for Basic Spectrophotometer

UV wavelengths:

operational (O₃ mode): 303.2(Hg slit), 306.3, 310.1, 313.5, 316.8, 320.1 nm

mercury-calibration: 302.1 nm

resolution: 0.6 nm in UV

stability: +/-0.01 nm (over full temperature range)

precision: 0.006 +/-0.002 nm

measurement range: 285 to 365 nm (O₃ mode)

Exit-slit mask cycling: 0.12 sec/slit, 1.6 sec for full cycle

Measurement accuracy: +/-1% (for direct-sun total ozone)

Operating temperature range

-20 to +40 C (-4 to 104 F)

-50deg to +40deg C (when cold weather kit is installed)

Physical dimensions (external weatherproof container)

size: 70 by 46 by 34 cm

weight: 34 kg (75 lbs)

Power requirements:

1 A @ 80 to 140 VAC, or

0.5 @ 160 to 264 VAC;

47 to 440 Hz

1.2 Automated Foreoptics

1

The basic Spectrophotometer provides automated stepper-motor control of the micrometer (which rotates the diffraction grating) and the slit mask. The system also controls three other stepper motors to automate three elements in the foreoptics assembly: the iris diaphragm, and filterwheels#1 and #2. The associated driving and sensing electronics are supplied on a COSMAC-compatible I/O (input/output) Interface board. The Brewer software will automatically control the new motors once the Instrument Configuration file has been appropriately reconfigured.

1.3 Azimuth- and Zenith-Pointing System

These features provide the necessary hardware and electronics to enable the Spectrophotometer to track the sun or moon across the sky automatically. Automated azimuth positioning is achieved by mounting the instrument on an Azimuth Tracker (refer back to figure sds.0-1), while automated zenith positioning is performed by driving the zenith prism with a stepper motor mounted on the frontend of the foreoptic frame. Both the azimuth- and zenith-stepper motors are controlled by the COSMAC microprocessor within the Spectrophotometer from an I/O board which also controls FW # 3 on MKIV.

The Azimuth Tracker is an all-weather positioning pedestal comprising a weatherproof chassis (housing a large stepper motor, drive electronics, and gearing) mounted on the vertical axis of a tripod foundation

Specifications for the Zenith Motor:

Resolution:+/-0.13 deg.

Accuracy (24 hours): +/- 0.25 deg.

Angular range:0..270 deg.(limited by endstops)

Specifications for the Azimuth Tracker

Resolution:+/-0.02 deg.

Accuracy (24 hours):+/- 0.2 deg

Max. slew rate: 3.91 deg/sec

Max. angular excursion: -60 deg to +420 deg

Payload capabilities:

Max. static torque: 14.9 Nm (11 ft lb f)

Max. balanced weight: 50 kg (110 lbs)

Operating temperature

range: -20 deg to +40 deg C (-4 deg to 104 deg F)

Dimensions

Chassis Enclosure:

30.5 by 30.5 by 35.6 cm (12 by 12 by 14 inch)

Height: 91.4 cm (36 inch) with tripod

45.7 cm (18 inch) without tripod

Power requirements:

120 V AC 60 Hz @ 0.5 A, or

240 V AC 50 Hz @ 0.25 A

1.4 Option Ultraviolet-B Monitor

)

The UV Monitor is an optical assembly which enables the Brewer to measure UV-B & UV-A irradiance using a thin disc of teflon (cosine response) as a transmitting diffuser. The disc is mounted on top of the instrument under a 5-cm diameter quartz dome, and is thus exposed to the horizontal UV irradiance. Beneath the disc is a fixed reflecting prism which is located so that the disc is in the spectrometer field-of-view when the zenith prism is set for a zenith angle of -90.

Figure sds.1-4 shows an end view of the foreoptics with the UV-B subassembly in place; table sds.1-1 summarizes the zenith-angle settings for the various spectrometer targets. The UV measurement software routine supplied scans from 287 to 350 nm on slit 1 and 301 to 365 nm on slit 5, in 0.5 nm increments (nominal). The irradiance at each wavelength is integrated to produce a damaging UV value (DUV) weighted to the DIFFEY action spectrum.

A slight adjustment to the DIFFEY weighting allows for UVA irradiance estimation. Therefore, printed integrated irradiance values represent both UVB and UVA. Reference attachment UVB for data collection and analysis procedures.

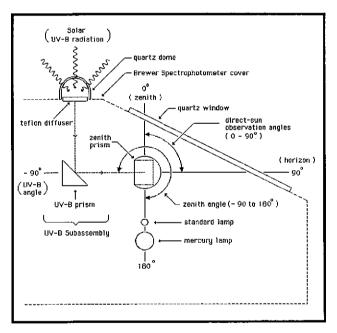


Figure sds.1-4: End view of the foreoptics with the UV-B subassembly installed. The zenith prism has been rotated to its -90 position so that the teflon diffuser is in the spectrometer's field-of-view.

Zenith angle (degrees	Object viewed by Spectrometer	
090	sky or sun	
180	calibration lamps	
-90	UV-B diffuser	

Table sds.1-1 Spectrometer Targets for Various Zenith Angles

2. Mechanical Construction

The Brewer Spectrophotometer is housed in a weatherproof container constructed from two pieces: a base (to which all optical and electronic assemblies are anchored), and a removable cover. When the cover is fastened in place, a weatherproof seal is formed between the top edge of the base and a lip 5 cm up from the bottom of the cover. The nominal dimensions of the assembled container are 70 by 46 by 21 cm.

The Brewer instrument's control-panel can be viewed through a 0.95-cm perspex window in the top of the cover. The viewing ports for both the entrance slit and iris are visible through the perspex window.

When the cover is in place an adjustment knob on the outside of the container can be used to manually position the zenith prism. This knob forms a weatherproof seal through the container wall (for units with manual zenith adjustment kit only).

In one corner of the cover is a 14-cm deep, 35-degree inclined surface. A 6.35- by 14-cm hole has been cut from this surface to provide an opening which is properly positioned to pass direct sunlight or zenith skylight to the spectrophotometer. This opening is covered by a quartz window [QW 1], which is secured by a weatherproof seal. (Note: items enclosed by square brackets, [], are references to Appendix A: Selected Parts List).

Three circular weatherproof connectors are mounted on the side of the container base below the weatherproof seal. The six-pin male connector marked AC POWER connects to the 120V (or 240 V) AC power supply. The ten-pin female connector marked COMPUTER carries the RS-232C data communication signals. The ten pin male connector marked AZIMUTH carries motor control and monitor signals for the azimuth tracker.

Three foreoptic manual adjustments are provided to control:

- * filterwheel #1 (ground quartz in or out and film polarizer in or out.)
- * filterwheel #2 (neutral density filters)
- * the iris diaphragm.

The primary and secondary power supplies are enclosed within vented enclosures and secured to the base of the weatherproof container. The cardframe and heatsink are also mounted to the container base.

All exposed surfaces of the spectrophotometer (including the external surfaces of the weatherproof container and the mechanical linkages) are painted with 'Dupont Imron' enamel for durability and to minimize radiative heating. All machined aluminum parts in the spectrophotometer system are black-anodized to minimize scattered light and provide a protective finish.

sds.2. Mechanical Construction - 1

1

This page left intentionally blank

)

3. Foreoptics

Figure sds.3-1 shows a diagrammatic view of the optical elements encountered by a light ray entering and traversing the spectrophotometer. A right-angle rotatable zenith prism at the frontend of the foreoptics assembly directs light from one of five sources (sky, sun, UVB port, mercury lamp, or tungsten-halogen lamp) through a set of light-conditioning elements into the spectrometer. These elements are:

- * quartz lenses and iris diaphragm to control field-of-view
- * ground-quartz diffuser for sunlight and halogen lamp measurements and film polarizer to allow only one plane of polarized light to enter the spectrophotometer.
- * five selectable neutral-density filters to provide up to 2.5 decades of attenuation

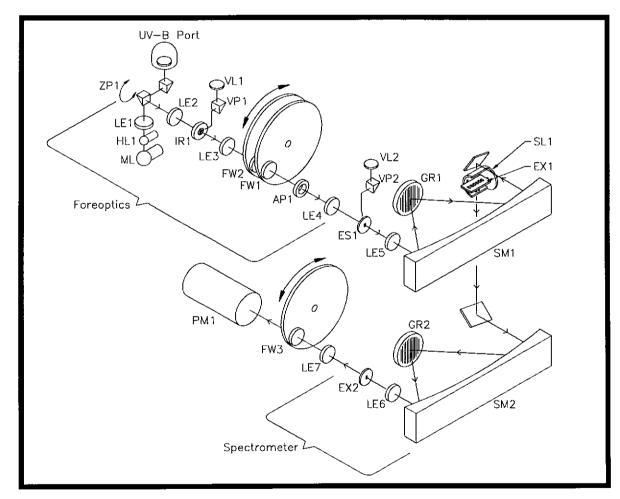


Figure sds.3-1: Diagrammatic view of the optical elements (not to scale). Zenith prism ZP1 directs incoming light into the foreoptic assembly. The three-letter identifiers are listed in Appendix A: Selected Parts List.

sds. 3. Foreoptics - 1

3.1 Zenith Prism

The right-angle zenith prism [ZP 1] reflects incoming light from the sky, sun, mercury lamp, or halogen lamp into the optical axis of the instrument. For zenith angles in the range 0 to 90 the sun or sky is viewed through an inclined quartz window, at zenith angle 180 the spectrometer views the calibration lamps, and at -90 the teflon UV-B diffuser occupies the field-of-view. Refer back to figure sds.1-4.

The prism is mounted in a retainer which rotates in a dual-bearing system which has negligible lateral play and does not bind over the operating temperature range. The 270-degree rotation range of the prism is limited by end stops. The prism is rotated either manually (basic instrument), or by the microprocessor-controlled zenith stepper motor (option B upgrade).

3.2 Lamp Assembly: Quartz-Halogen and Mercury Lamps

The quartz-halogen lamp [HL 1] provides a well-regulated light source which is used as a reference for sensitivity measurements; the mercury lamp [ML 1] provides the line source used for wavelength calibration. The halogen lamp is powered by a constant-current source of nominal value 1.5 A, held constant to within 0.5% over a temperature range of -20 to +40 C. The intensity of the ultraviolet light from the lamp under these conditions is stable to within 5%. The filament of the lamp is placed at the focal point of a double-convex lens [LE 1] so that the light from the lamp is directed along the optical axis of the spectrometer by the zenith prism.

Behind the halogen lamp is a mercury lamp. Ultraviolet light from the mercury lamp is diffuse and passes through the halogen lamp to the zenith prism. While the actual light intensity of the lamp is not critical (a variation of 50% over the operational temperature range is normal), the intensity must remain stable to within 5% for short time periods (10 minutes).

When the lamp is off, a quiescent current of 100 mA through the bulb is maintained; this ensures that the lamp will light reliably at temperatures as low as -15°C.

3.3 Iris-Diaphragm Assembly

)

An iris diaphragm [IR 1] is mounted in the foreoptics at the ultraviolet focus of a plano-convex lens [LE 2]; thus the lens focuses ultraviolet objects at infinite distance onto the plane of the iris. A lever arm which protrudes through the wall of the foreoptic tubing controls the iris: at one limit of the lever arm the iris aperture is 5 mm (iris 'closed'), at the other limit the aperture is approximately 15 mm. The lever is actuated either manually (basic instrument), or by the iris stepper motor (option A upgrade).

When the instrument is aligned to view sunlight an ultraviolet image of the sun is focused at the centre of the iris. With the iris closed, about three solar diameters of skylight around the sun pass through the iris aperture into the spectrometer; with the iris open, about 10 degrees of skylight enters the spectrometer.

On the spectrometer side of the iris there is another plano-convex lens [LE 3]. This lens is positioned such that its focal point is in the plane of the iris: light passing through the iris aperture is therefore collimated along the optical axis.

Both lenses [LE 2, LE 3] in the iris-diaphragm assembly are mounted with their plane side facing the iris.

3.4 Filterwheels

)

Two filterwheels [FW 1, FW 2] are mounted on bronze bearings in a filter-wheel housing. Each wheel has six 25.4-mm-diameter holes spaced at 60-degree intervals. Each hole can be selected to intersect the optical axis by rotating its filterwheel. The filterwheels are rotated either manually (basic instrument), or by two microprocessor- controlled motors (option A upgrade).

Filterwheel #1 contains one open hole (position 3), two film polarizers (position 0 & 5), a ground-quartz disk (position 1), an opaque blank (position 2) and a second ground quartz disk and neutral density filter (position 4). The ground-quartz disk is used as a diffuser for direct-sun and lamp measurements. The opaque disk is used for dark count tests. The film polarizer (position 0) is used for all zenith sky and Umkehr measurements. This film polarizer is mounted such that the polarizer's axis is perpedicular to the entrance slit. The second film polarizer (position 5) is mounted such that the polarizers axis is parallel to the entrance slit. It is presently for research and development purposes only. The open position (#3) is used for moon and UVB observations. The second ground quartz/N.D. filter is used for NO2 operation on MKIV type Brewers.

Filterwheel #2 contains an open hole (position 0) and five neutral-density filters providing 0.5, 1.0, 1.5, 2.0 and 2.5 orders-of-magnitude attenuation (positions 1 through 5 respectively).

All filters are retained in their filterwheels by Dow 3140 RTV bonding agent.

An 11.18-mm fixed aperture [AP 1] located on the spectrometer side of the filterwheel housing limits the field-of-view of the spectrometer to f/6.

3.5 Foreoptic Viewing Ports

)

There are two viewing ports along the foreoptic assembly: through one port the operator may view the iris diaphragm and any images which are focused onto it; through the other the operator may view the entrance slit.

At the bottom of each viewing port is a glass right-angle prism [VP 1, VP 2] mounted inside the foreoptic tubing. The prisms are aligned so that the object to be viewed (iris or entrance slit) appears centred in the viewing port. A plano-convex glass lens [VL 1, VL 2] is placed in each viewing tube to magnify the image.

sds. 3. Foreoptics - 3

3.6 Rear Fore-Optics.

A plano cover lens [LE-4] whose plane suface face the entrance slit of the spectrometer and focuses the polarized, collimated ultraviolet light onto the entrance slit of the spectrometer.

}

4. Spectrometer

)

)

}

The purpose of the spectrometer optical subassembly is to accept light at the entrance slit and disperse it into a high-quality spectrum along the exit-slit focal plane. The spectrometer is a modified Ebert type with focal length 16 cm, and aperture ratio f/6.

Light enters the entrance slit and passes through a tilted lens [LE 5] which corrects for the coma and astigmatic aberrations inherent in an Ebert system. The light is then collimated by a spherical mirror onto the grating where it is dispersed. A second mirror reflection focuses the spectrum onto the exit-slit focal plane. Six exit slits are located along the focal plane at the appropriate wavelength positions. A slotted cylindrical slit mask positioned in front of the exit slit plane serves as the wavelength selector.

4.1 Entrance- and Exit-Slit Plates

The entrance slit and six exit slits [ES 1, EX 1] are laser-etched into 0.1-mm-thick disks of hard shim steel. One of the six exit slits (slit #0) is used for wavelength calibration against the 302-nm group of mercury lines; the other five are for intensity measurements and are normally set at 306.3, 310.1, 313.5, 316.8, and 320.1 nm. The dimensions for the entrance and exit slits are listed in Appendix A of this section. This information can also be found in the Acceptance Manual which accompanies each instrument.

Both slit plates are positioned on their respective housings by locating pins which orient the slit axis to within 0.1 degrees. Both plates are blackened to minimize light reflections.

4.2 Correction Lens

The correction lens [LE 5] has a convex-cylindrical surface (radius 170.0 mm) and a concave-spherical surface (radius 230.0 mm).

Both surfaces are coated with a layer of magnesium fluoride to minimize reflectance at 315.0 nm for an incidence angle of 29 degrees. The lens is mounted in the entrance-slit housing at an angle of 29 degrees to the optical axis with the concave-spherical surface facing the entrance slit. The axis of the cylindrical surface is positioned in the horizontal plane to within 1.

sds.4. Spectrometer - 1

4.3 Spherical Mirrors

The spherical mirrors [SM 1 & SM 2] has a 324-mm radius-of-curvature. The spherical surface is ground from a rectangular pyrex blank; the surface is polished, coated with aluminum, then coated with magnesium fluoride to maximize reflection at 315.0 nm.

A spring-loaded mount secures the spherical surface of the mirror against three adjustment screws which are normal to the spherical surface in the horizontal plane of the spectrometer. The mirror is allowed to move on a spherical surface defined by the three adjustment screws, up to a limit of 0.25 mm in the horizontal and vertical. Nylon screws prevent the mirror from moving beyond this limit.

4.4 Diffraction Gratings

The diffraction gratings [GR 1 & GR 2] is an 3600 line/mm holographic plane-reflectance type operated in the first order for O₃/SO₂. The grating has optimum efficiency over the range 225 to 450 nm in the first order.

The grating is secured with high-quality adhesive (such as 3M EC-801) to three small blocks which provide a kinematic mount for the grating as well as fine adjustment for rotation of the grating about the two axes perpendicular to the grating grooves. The three blocks are thus part of the grating and are the basis of a point, slot, and plane mount which allows adjustment by three screws fixed in the grating-mount plate. This plate is suspended on a set of cross-springs which constrain the grating to rotate in the vertical axis (the axis parallel to the grating grooves). The cross-spring suspension acts as a frictionless bearing. Rotation of the grating is controlled by a micrometer acting at the end of a lever arm such that a 0.03-mm adjustment of the micrometer represents approximately a 0.1-nm wavelength change at the exit-slit plane.

4.5 Micrometers

The metric micrometer heads clamped to the spectrometer frame are used to adjust the grating rotation for either half of the spectrometer. Micrometer #1(top) adjusts the grating in the dispersing half (top) and micrometer #2 adjusts the grating in the re-combining half (bottom). The micrometer shaft is ground to a 60-degree cone which inserts into a bearing at one end of a pushrod. A conical depression with a tetrahedral corner at the other end of the pushrod locates a 60-degree cone mounted on the end of the grating lever arm. The pushrod is secured between the micrometer shaft and lever arm by a tension spring. The material of the pushrod has been selected to minimize differential temperature expansion effects.

The micrometers are rotated by stepper motors. The motor drives a 10-tooth gear which is kinematically linked to a 60-tooth gear on the micrometer shaft. The drive shaft is coupled to the motor shaft with a universal joint.

One motor step represents 0.006 nm on the exit-slit plane. Backlash of the micrometer and cross-spring bearing system has been measured at 0.002 nm. The

sds.4. Spectrometer - 2

temperature range of operation for the stepper motor and micrometer adjustment is -20° to $+40^{\circ}$ C.

4.6 Slit Mask Assembly

Directly in front of the exit-slit plane (located between the two spectrometer halves) is a slotted mask which may be located in one of eight positions (see figure sds.4-1). Six of the eight positions allow light to enter one of the six exit slits. The second mask position blocks light from all slits so that a dark measurement can be made. The eighth mask position exposes two of the exit slits so that the dead time of the photon counting system may be determined. The correspondence between slit mask position and selected wavelength is summarized in table sds.4-1.

The axis of the cylinder is attached to the shaft of a stepper motor. The mask is aligned with the exit slits by adjusting the vertical position of the motor and adjusting the horizontal position of the cylinder on the motor shaft.

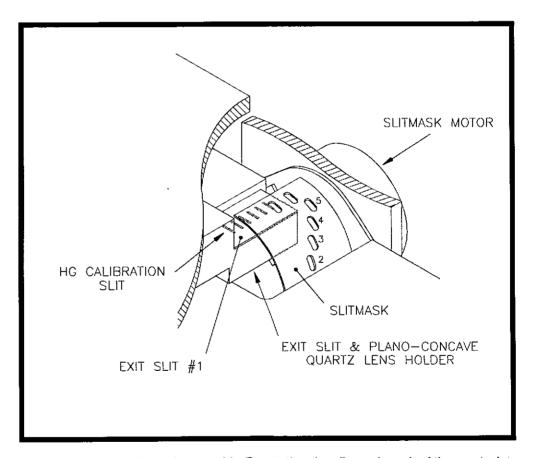


Figure sds.4-1: slit mask assembly. By rotating the slit mask each of the mask slots will align with a corresponding slit in the exit plane, effectively selecting a single wavelength. During an HG test the bottom-most slot in the slit mask aligns with the Hg calibration slit in the exit plane. The dual-slot position allows deadtime of the photomultiplier to be determined.

sds.4. Spectrometer - 3

)

)

.)

Slit Mask Position	UV Wavelength	ength Setting (nm)	
0	Hg Calibration:	303.2	
1	Dark Count:		
2	Wavelength 1:	306.3	
3	Wavelength 2:	310.1	
4	Wavelength 3:	313.5	
5	Wavelength 4:	316.8	
6	Wavelength 5:	320.1	
7	Wavelength 2 & 4 for Deadtime Test		

Table sds.4-1: slit mask position vs selected wavelength. (This table assumes that an HG calibration test has recently been performed.)

5. Photomultiplier

Light passing through the exit slits is focused onto the cathode of the photomultiplier [PM 1] by a 38.1-mm-focal-length quartz Fabry lens [LE 6].

Located between the Fabry lens and the photomultiplier is FW #3 with a blocking filter combination: a 10-mm-thick nickel sulphate crystal [BF 1] packaged between two - 1mm thick UG11 filters [BF 2], an open position (normally used for MKIII) and a UG11 filter [BF4], which is the most commonly used position for MKIV operation. BF1 is the original filter combination used in other Brewers for O₃/SO₂ and UVB measurements

The cathode of the photomultiplier [PM 1] is located at the ultraviolet focus of the Fabry lens. The spacing between the lens and the photomultiplier takes into account the apparent change in focal length due to the presence of the filters. The photomultiplier is enclosed in a magnetic shield which is maintained at cathode potential (approximately -1300 V) to minimize dark noise in the photomultiplier. The photomultiplier and its shield are spring-loaded against a teflon ring which locates the cathode at the center-of-focus of the Fabry lens and also insulates the magnetic shield from the photomultiplier housing.

Do not dismantle the photomultiplier assembly: small displacements of these optical components can produce apparent intensity variations of the order of 1% from wavelength to wavelength resulting in degraded ozone measurement accuracy. (These variations arise from the slight spatial nonlinearities in both the response of the photomultiplier cathode and the transmissivity of the blocking filters.) The photomultiplier housing has been designed to allow access to the photon amplifying and discriminating circuitry without disturbing the photomultiplier optics.

sds.5. Photomultiplier - 1

this page left intentionally blank

Appendix A: Selected Parts List

AP	1	Fixed aperture, 11.18 mm	
----	---	--------------------------	--

- ES 1 Entrance slit plate, dia: 26.37 mm, thk: 0.10 mm

 Slit, length: 3.30 mm, width: 0.34 mm.
- EX 1 Exit slit plate, length: 28.95 mm, width: 19.05 mm, thk: 0.10 mm

 Slits, length: 5.08 mm, width(3): 0.589 mm, width(3): 0.632 mm.
- EX 2 Exit slit plate, dia: 26.37 mm, thk: 0.10 mm

 Slit, length: 5.08 mm, width: 0.632 mm.
- FW 1 Filterwheel #1 made from aluminum gear material, with two ground G1-quartz disk, dia: 25.4 mm, width: 1.59 mm, and film polarizer, dia: 25.4 mm, width: 1.59 mm.
- FW 2 Filterwheel #2, made from aluminum gear material with 5

 neutral-density filters; each with dia: 25.4 mm,

 width: 1.59 mm; attenuations: 0.5, 1.0, 2.0, 2.5 decades

 (prepared from G1 quartz blanks by Applied Physics Specialties)
- FW 3 Filterwheel #3, made from aluminum gear material (4 openings), and holds BF1 BF4.
- BF 1 Blocking filter, nickel sulphate crystal, dia: 25.4 mm, width: 10 mm
- BF 2 Blocking filter, UG11, dia: 25.4 mm, width: 1 mm, (2 pieces) packaged with BF1.
- BF 4 Blocking filter, UG11, dia: 25.4 mm, width: 2 mm
- GR 1,2 Grating, 3600 line/mm holographic plane reflectance, dia: 50 mm, thickness: 10 mm (Jobin-Yvon)

)

Identification		ation	Description			
	HL	1	Tungsten-halogen lamp, 12 V, 20 W, Osram 64425, mounting:			
			Amel Socket for #28-8341 light source			
	I R	1	Iris diaphragm, aperture range: 2 to 12 mm (Edmund Scientific			
			catalogue #40997)			
	LE	1	Lens, double-convex, G1-quartz, focal length: 25.4 mm,			
			dia: 25.4 mm			
	LE	2	Lens, plano-convex, G1-quartz, focal length: 76.2 mm,			
			dia: 25.4 mm			
	LE	3	Lens, plano-convex, G1-quartz focal length: 50.8 mm,			
			dia: 25.4 mm			
	LE	4	Lens, plano-convex, G1-quartz, focal length: 76.2 mm,			
			dia: 25.4 mm			
	LE	5,6	Correction lens G1 quartz, dia: 25.4 mm, radius 1: 170.0 mm,			
			convex cylindrical, radius 2: 230.0 mm, concave spherical,			
			coating: magnesium fluoride			
	LE	7	Fabry lens, double-convex, G1 quartz, dia: 38.1 mm focal			
			length: 38.1 mm			
	MI	1,2	Micrometer, metric, Starrett #463 MP,13-mm head,			
			EDP #52444			
	ML	1	Mercury lamp, ozone-producing, General Electric G4S11;			
			mounting: 14-71 intermediate screwsocket			
	РМ	1	Photomultiplier, EMI #9789QB05			
	QW	1	Quartz window, G1 quality 7.62 by 15.24 by 0.48 cm			
	SL	1	Slit mask, cylindrical sector, dia: 25.4 mm,			
			thickness: 0.038mm			

J

Identific	cation	Description
SM	1,2	Spherical mirror, radius: 324 mm, ground from pyrex blank of
		dimensions 25.4 by 165.1 by 50.8 mm, aluminized reflecting
		surface, coated with magnesium fluoride
VL	1,2	Viewing lens, plano-convex, glass. dia: 15 mm,
		focal length: 112 mm (Edmund Scientific catalogue #95738)
VP	1,2	Viewing prism, right-angle, glass 7 by 8 by 7 mm
		(Edmund Scientific catalogue #30575)
ZP	1	Zenith prism, right-angle, G1-quartz, 31.75- by 31.75-mm
		square face

this page left intentionally blank

COMMUNICATING WITH THE BREWER

Table of Contents

				F	age
1.	Over	view			1.1
2.	Desc	ription	of the Brewer	Serial Port	2.1
3.	Comr	nunica	ating via an AS	CII Terminal	3.1
4.	Comr	munica	ating - The PC-	to-Brewer Interface	4.1
5.	The L	ow-le	vel Brewer Cor	mmand Set	5.1
	į	5.1	AGAIN:	Repeat Last Instruction Indefinitely	5.2
	į	5.2	BULB:	Toggle Lamp(s) On or Off	5.2
	į	5.3	DUMP:	Transmit Contents of Memory Location	5.3
	į	5.4	FILL:	Define (or Suppress) Header Characters	5.4
	!	5.5	GET:	Transmit Byte from I/O Page	5.5
	!	5.6	INITIALIZE:	Zero Specified Stepper Motor	5.6
	ļ	5.7	LOAD:	Store Byte at Memory Location	5.7
	ļ	5.8	MOTOR:	Move Specified Motor	5.8
	!	5.9	OUTPUT:	Transmit Array of Photon Count Values	5.9
	;	5.10	QUIT:	Exit to COSMAC Monitor	5.10
	:	5.11	RUN:	Measure Light Intensity	5.10
	:	5.12	STATUS:	Transmit Current Status	5.11
	;	5.13	TALK:	Retransmit Last Buffer	5.12
		5.14	V:	Set Baud Rate and Echo	5.12
		5 15	7.	Transmit Contents of Specified A/D Channel	5.13

this page left intentionally blank

1. Overview

The Brewer Spectrophotometer has an onboard RCA 1802 microprocessor which controls the host of low-level functions performed by the instrument: positioning the stepper motors, turning the standard (tungsten-halogen) and mercury lamps on or off, synchronizing photon counting with slit mask position, accumulating and transmitting photon counts, monitoring instrument temperature.

The Brewer instrument communicates with the outside world via a simplified RS-232C serial interface which can run at 300 or 1200 bits per second (bps). (The detailed specifications of the interface are provided in the next section.) In normal operation, the 'outside world' is a IBM compatible PC with a serial port, connected to the Brewer's 25-pin DB-25S serial interface socket.

Commands are usually transmitted to the instrument by the Brewer program running on the PC. Alternatively, the user may control the instrument directly by setting the program to its 'teletype' mode (select TT from the Operating Menu), then typing the appropriate low-level command sequences. Any ASCII (American National Standard Code for Information Interchange) terminal with an RS-232C interface may be used in place of the PC for these low-level diagnostic tests.

When the Brewer spectrophotometer is powered up or reset it transmits a message similar to the following at 300 bps:

BREWER SPECTROPHOTOMETER

#022

AES SCI-TEC

CANADA

VERSION 39.10 FEB 1, 1994

(The serial number, version number, and version-release date will probably be different for your instrument.)

cwb.1. Overview - 1

,

.

this page left intentionally blank

2. Description of the Brewer Serial Port

The specifications for the serial port are summarized below:

Baud rate:

300 (default) or 1200 bps

Word length:

8 bits

Parity:

none

Stop bits:

1

Configuration:

DCE (data communications equipment -

i.e. modem-like)

The baud rate and echo setting can be altered with the V command - see section 5.15 (V: Set Baud Rate and Echo). The Brewer's DB-25S socket is wired to appear as a modem to any connecting terminal: refer to figure cwb.2-1.

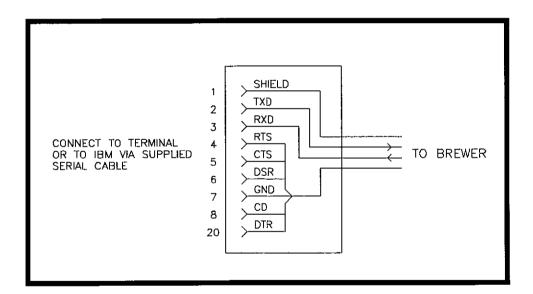


Figure cwb.2-1: Wiring diagram for Brewer Spectrophotometer DB-25S Data Cable socket.

ì

this page left intentionally blank

3. Communicating via an ASCII Terminal

)

The communications software stored in the COSMAC ROM (read-only memory) was originally designed for an uppercase-only printing terminal which had keys for the special characters DEL (delete: ASCII character 127), BREAK (holds the TXD line low as long as the Break key is depressed), LF (linefeed: ASCII character 10), CR (carriage return: ASCII character 13), and ^X (control-X: ASCII character 24 - hold down Control key, then type X; this can be used to cancel a misspelled or partially entered command). Any video or printing ASCII terminal with a RS-232C serial interface can be used as the command console.

Once the terminal has been set to full duplex, 300 bps and connected to the Brewer serial port you should confirm that the Brewer is communicating. Hit the Return key (sometimes labeled Enter) several times; you should receive a fresh Brewer prompt

->

for each Return typed. Request a status report from the Brewer by typing

S <Return>

(This is an uppercase S; lower-case characters are echoed to the terminal but otherwise ignored by the Brewer means 'hit the Return key'.) The Brewer will respond with a comma-separated list of six numbers:

0, 4, 0, 32, 0, 0,

The numbers returned depend on what operations the Brewer has been performing previously - see section 5.13 (STATUS) for details. You will observe that the response is printed on the same line as the S command. To improve readability, modify the command sequence slightly by typing a Linefeed before the Return:

S <Linefeed> <Return>

The Brewer echoes (but otherwise ignores) the Linefeed, causing the terminal to advance one line, and interprets the Return to mean 'end of command string, execute the command(s)'.

The command-string syntax takes the form

<Command>, <arguments>; <command>, <arguments>; ... <Return>

Example:

R, 0, 7, 4; 0; A <Return>

(<u>Run</u> the slit mask motor from position 0 through 7 and back again accumulating photon counts in 8 separate accumulators, repeat this cycle 4 times; <u>Qutput</u> (transmit) the 8 photon-count totals to the Brewer as a comma-separated list; <u>Again:</u> repeat the entire count-then-transmit sequence until the operator types Break.)

The semicolon (;) is the command separator; comma (,) is the argument separator; carriage return (<Return>) is the command-string terminator.

A modest editing facility is available: use the Delete key to erase the last character typed (the Brewer will transmit the 'deleted' character back to the terminal); use control-X (hold down the Control key then type X) to cancel the command currently being typed. Note that the Brewer ignores Backspace (ASCII character 8) as an editing key.

The Break key provides two important functions: if Break is held down for less than five seconds (approximately) the Brewer will abort any command currently being executed and display the – prompt. If Break is held down for more than 5 seconds the Brewer will perform a complete instrument reset (slit mask motor returns to its zero position, all internal counters are cleared, baud rate set back to 300 bps, startup message transmitted to the terminal).

If you wish to set the baud rate to 1200 bps, use the V command with an argument of 120:

```
V, 120 <Return>
```

(A baud rate of 1200 bps implies a character transfer rate of approximately 120 characters per second.) Set the terminal to 1200 bps, then press Return. The Brewer should respond with the usual ¬> prompt.

If your terminal appears to be character-doubling (for example, typing S produces SS on the display) then the terminal is incorrectly set at 'half-duplex' (sometimes called 'local echo'). Set the terminal to full-duplex to clear the problem. An alternative, less satisfactory, solution is to set the Brewer to 'no echo'. Listed below are four V-command permutations:

```
V, 120, 1 (1200 bps, no echo)
V, 30, 1 (300 bps, no echo)
V, 120 (1200 bps, echo enabled)
V, 30 (300 bps, echo enabled)
```

4. Communicating: The PC-to-Brewer Interface

)

This section details how the PC is used as a terminal to control the Brewer instrument. (The reader is assumed to be familiar with the previous section which described usage of a standard ASCII terminal.)

Ensure the 15 metre serial communications cable is installed: the DB25s end plugs into the Serial Port at the back of the PC, the other end mates with the appropriate circular connector on the Brewer instrument. (The wiring schematics for this cable, appear in the Maintenance Manual, page 7.1-7)

From any of the Brewer Software menus select the TT (teletypewriter) option. The TT program automatically sets the communications link to 300 bps, full duplex (that is, the instrument will 'echo' all characters transmitted by the PC). If you would like a printed record of the TT communications session then respond 'y' (yes) to the prompt:

do you want hard copy?

The PC keyboard lacks several important keys such as Linefeed, Break. The TT routine compensates for these deficiencies by redefining three keys:

The DEL key functions as a toggling Break: hit DEL to generate a Break 'character' when the slit mask is running, for example.

If you make a mistake typing a command, then note:

(Control-X cancels any text on the current command line.)

Press the HOME key when you wish to terminate the TT communications session and return to the previously displayed main menu.

this page left intentionally blank

5. The Low-Level Brewer Command Set

A command string may consist of one or more commands, each command separated by a semicolon (;) or colon (:). Each command may have associated with it one or more comma-separated parameters. The end of a command string is indicated by typing Return.

The syntax for a single command is:

```
<Command>, <arguments> <Return>
```

Examples:

S <Return>

Transmit current status.

Run slit mask motor from position 0 to 7 and back; repeat this sequence 5 times, accumulating photon counts.

The syntax for a multiple-command string is:

```
<Command>, <arguments>; <Command>, <arguments>; ... <Return>
```

Example:

```
R, 0, 7, 5; 0; A <Return>
```

Run the slit mask motor from position 0 to 7, repeat sequence 5 times; output accumulated photon counts; repeat this accumulate-then-output sequence indefinitely.

5.1 AGAIN

Syntax:...; A

Description:

Repeat the command(s) (...) until the user either hits the Break key, or repeatedly types any character key.

Examples:

Continue re-executing the command subsequence 'R, 0, 7, 3; Q' until a Break is detected. The subsequence means 'Run the slit mask motor from position 0 through position 7 (accumulating the photon counts in 8 separate channels) and back again, repeat this to-and-fro motion 3 times; transmit (Qutput) the accumulated photon counts as a comma-separated list.

Repeatedly move the Motor #3 (Iris motor) from one extreme position to the other.

5.2 BULB

Syntax: B, p1

Description:

Turn on or turn off the standard lamp and/or the mercury lamp.

Parameter:

Parameter p1 is a 2-bit decimal control code: bit-0 controls the mercury lamp, bit-1 controls the standard lamp.

p1	standard lamp	mercury lamp
0	off	off
1	off	on
2	on	off
3*		

^{*} used to switch motor control from micrometer #1 to filterwheel #3 for filter reset test (FR). B,0 switches motor control back to micrometer #1.

Example:

B, 2 <Return>

Turn the standard lamp on, turn the mercury lamp off.

NOTE: Command B,3 redirects motor 10 control to FW#3 and command B,0 is used to reset motor 10 back to Micrometer #1.

5.3 DUMP

Syntax: D, p1, p2, ...

Description:

Transmit to the Terminal the byte values located at COSMAC memory addresses p1, p2, ... (Distinguish this command from Get which fetches byte values located at COSMAC <u>I/O</u> addresses - see section 5.5 (GET)).

Parameters:

Parameters p1, p2, ... are 16-bit COSMAC memory addresses written as signed <u>decimal</u> numbers in the range -32768..32767. The decimal-to-hexadecimal mapping follows the standard twos-complement scheme:

Decimal paramater	Hexadecimal address	
paramater	addiess	
0 1	0000 0001	
:	:	
32767	7FFF	
-32768	8000	
-32767	8001	
:	:	
:	:	
-2	FFFE	
-1	FFFF	

Each byte value returned by the Dump instruction will be an integer within the range 0..255.

Example:

D, 17, -54, 1024 <Return>

Transmit the byte contents of (hexadecimal) locations \$0011 (decimal 17), \$FFCA (-54), \$0400 (1024) as a comma-separated list to the Terminal.

The memory addresses for the Brewer motor positions are as follows:

Motor 1 Zenith:

16895 hi byte (value* 256) + 16896 low byte (value) = position.

cwb.5. The Low-Level Brewer Command Set - 3

ì

Motor 2 Azimuth:

16907 hi byte (value* 256) + 16908 low byte (value) = position.

Motor 3 Iris:

16919 hi byte (value* 256) + 16920 low byte (value) = position.

Motor 4 Filter wheel #1:

16931 hi byte (value* 256) + 16932 low byte (value) = position.

Motor 5 Filter wheel #2:

16943 hi byte (value* 256) + 16944 low byte (value) = position.

Motor 10 Micrometer #1

16955 hi byte (value* 256) + 16956 low byte (value) = position.

Motor 11 Slit mask motor

16967 hi byte (value* 256) + 16968 low byte (value) = position.

Motor 6 Micrometer #2

16979 hi byte (value* 256) + 16980 low byte (value) = position.

Example command sent to brewer for zenith motor:

D, 16895, 16896

5.4 FILL

Syntax: F, p1, p2

Description:

Define the fill characters (those characters transmitted as a 'header' before each output message) to be p1 repetitions of character p2.

Parameters:

Parameter p1 is the repetition count (0..255), p2 is the ASCII character to be transmitted as the fill character. The default values are 6 and 0 respectively, producing 6 ASCII Nulls (ie: F, 6, 0).

Examples:

F, 1, 7 <Return>

Transmit a single Bell character as the header.

F, 0, 0 <Return>

Suppress all fill characters.

5.5 **GET**

Syntax:

G, p1, p2, ...

Description:

Transmit to the Terminal the byte values located at the COSMAC I/O (input/output) addresses p1, p2, ...

Parameters:

Parameters p1, p2, ... are 16-bit COSMAC I/O addresses written as signed <u>decimal</u> numbers in the range 0..1935 (\$0000..\$078F). The I/O addresses and bit-maps are shown in tables cwb.5-1 and cwb.5-2 which follow. Each byte value returned by the Get instruction will be an integer within the range 0..255. In hexadecimal, I/O addresses take the form \$0LMN, where

L is the I/O level, with values 2..7 (only levels 2, 3, 4 are currently used)

M is a one-of-four select code with values 1, 2, 4 or 8

N is any hexadecimal digit, 0..F

Example:

Transmit the byte contents of (hexadecimal) I/O locations \$0220 (decimal 544), \$0320 (800), \$0420 (1056) as a comma-separated list to the Terminal.

I/O Address		Description
hexadecimanl decimal		
F000-F007	544 800 1055 20244-20257 61440-61447 63488-65535	Status of Slit Mask & Micrometer Status of Zenprism & Az-tracker motors Status of Iris & Filterwheel motors A/D Table Real-Time Clock Battery-backed-up RAM

Table cwb.5-1: COSMAC I/O Address Map for Brewer Spectrophotometer. The bit-maps for the first three I/O locations are shown in table cwb.5-2.

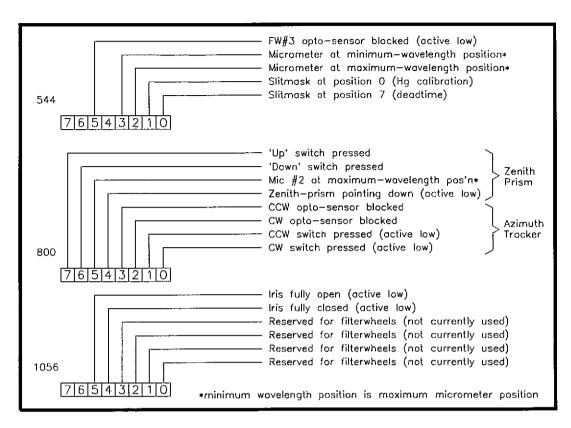


Table cwb.5-2: Bit-maps for I/O locations 544, 800, 1056 (or \$0220, \$0320, \$0420 in hexadecimal form). The bit is high when the condition is met (active low) unless otherwise specified.

5.6 INITIALIZE

Syntax: I, p1

Description:

Move the specified motor to its 'zero' position, then set the corresponding step-count accumulator to zero. (Note: the Initialize command is <u>not</u> used in the Brewer software.)

Parameters:

Parameter p1 is a decimal number specifying which motor is to be initialized:

Motor	Action		
1. Zenith Prism	moves Zenith Prism to Standard Lamp position (ie. pointing straight down)		
2. Azimuth Tracker	moves Tracker 500 steps CCW as viewed from above (not Particularly useful)		
3. Iris	moves Iris to its fully closed position		
4. Filterwheel 1	moves Filterwheel 1 to position #5 (zero attenuation)		
5. Filterwheel 2	moves Filterwheel 2 to position #0 (zero attenuation)		
10. Filterwheel 3	moves FW 3 to position for O ₃ Operation		

Example:

I, 3 <Return>

Move the Iris to its fully open position, then set the iris step-count to zero.

Warning: The Initialize command does not (currently) make use of the optical end stop sensors. The recommended alternative procedure is to use the Motor command followed by an appropriate Get to confirm that the stepper motor has reached the end stop.

5.7 LOAD

Syntax: L, p1, v1, p2, v2, p3, v3, ...

Description:

Store in COSMAC memory location pi the byte value vi.

Parameters:

Parameters p1, p2, ... are 16-bit COSMAC memory addresses written as signed decimal numbers in the range -32768 .. 32767. [Refer to section 5.3 (DUMP) for details of the mapping between hexadecimal and decimal addresses.] v1, v2, ... are 8-bit data values written as integers in the range 0..255.

cwb.5. The Low-Level Brewer Command Set - 7

Example:

Store \$23 (decimal 35) at memory location \$4699 (18073), store \$FF (255) at location \$FFC8 (65480 = 65536 - 56).

5.8 MOTOR

Syntax: M, p1, p2

Description:

Move the motor p1 to absolute step position p2. If p2 is negative the motor will be moved backwards by (the absolute value of) p2 steps, this new location will become the revised zero-step position.

Parameters:

Parameter p1 is a decimal number specifying which motor (1..5, 10, 11) is to be moved; p2 is a step number whose typical range for each motor is summarized in Table cwb.5-3.

Example:

M, 4, 256 <Return>

Move the ground-quartz diffuser on Filterwheel #1 into the optical path. If the filterwheel is put into the 320 position, the film polarizer is present instead of a transparent opening.

Motor # & Name	Step #	Position	Command String
1: Zenith Prism	0 1 4 08 2112	pointing at standard lamp (internal) pointing at zenith sky (external) pointing at UVB port (external)	M,1,0 M,1,1408 M,1,2112
2: AzimuthTracker	0 14670	reference direction (North) reference direction, 1 full turn CW from step #0	M,2,0 M,2,14670
3: Iris	0 75 or 250	iris fully closed iris fully open	M,3,0 M,3,75 or M,3,250
4: Filterwheel #1	320 256 192 128 64 0	0: film polarizer 1: quartz diffuser (translucent) 2: blocked aperture (opaque) 3: clear aperture (transparent) 4: quartz diffuser; ND of f=2.0 (translucent) 5: clear aperture (transparent)	M,4,320 M,4,256 M,4,192 M,4,128 M,4,64 M,4,0
5: Filterwheel #2	0 64 128 192 256 320	0: f = 0 1: f = 0.5 2: f = 1.0	M,5,0 M,5,64 M,5,128 M,5,192 M,5,256 M,5,320
6: Filterwheel # 3 (Note: B,3 command switches motor #6 from Mic #1 to Filter- wheel #3 and back)	50 114 178 242	UG-11 glass filter blocked aperture (opaque) clear aperture (transparent) NiSO ₄ & UG-11 filter	B,3;M,6,50;B,3 B,3;M,6,114;B,3 B,3;M,6,178;B,3 B,3;M,6,242;B,3
10: Micrometer #1 (top) 6: Micrometer #2 (bottom)	≈290	calibrated micrometer setting (nominal setting is 6±1.5mm; there are 576 steps/mm) (wavelength change of 0.006nm/step) (positive steps increase wavelength and decrease micrometer setting)	M,10,xxxx M,6,xxxx
11: Slit Mask	0 2 4 6	0: slit 0 (HG) 303.2 - 426.4 nm 1: dark count	M,11,xxxx NOTE: R,0,6,2;O;A gives
	8 10 12 14	4: slit 3 313.5 - 442.8 nm 5: slit 4 316.8 - 448.1 nm 6: slit 5 320.1 - 453.2 nm 7: dead time	a real time listing of the registers from 0 to 6, press <delete> to stop.</delete>

Table cwb.5-3: Settings for each of the seven stepper motors.

5.9 OUTPUT

Syntax:

O (letter oh)

Description:

Transmit to the Terminal all photon count data accumulated by the most recent Run command, then zero the photon-count accumulators. Photon counts are displayed in a comma separated list. Each count is the decimal representation of a 24-bit number, so will lie in the range 0..16777215.

Example:

Accumulate photon counts across all eight 'wavelength' channels by cycling the slit mask from position 0 through position 7 and back, repeat this to-and-fro cycle three times; transmit the photon counts to the Terminal as a comma-separated list. Typical output might be:

2345, 161, 124564, 345734, 456744, 234875, 566778, 574566

5.10 **QUIT**

Syntax: Q

Description:

Exit to the COSMAC monitor. (The monitor does not display a prompt.) The monitor supports a variety of very low-level functions (loading, dumping, testing) primarily intended for 1802 software development and diagnostics, and is not used or accessed in normal operation. To restart the Brewer program (and restore the prompt), type

<Return> \$PO <Return>

(the first Return sets the baud rate for the COSMAC) monitor)

or

<Return> \$P4020 <Return>

The first address restarts the Brewer program from 'cold' (ie. all Brewer variables re-initialized); the second address restarts the Brewer program without altering most of Brewer variables.

5.11 RUN

1

Syntax: R, p1, p2, p3

Description:

Measure light intensity for each of the wavelength positions p1 through p2 by running the slit mask from position p1 to position p2 and back again, accumulating the photon counts in separate channels. Repeat this to-and-fro sequence p3 times.

Parameters:

p1 may take values over the range 0..7, p2 is an integer selected from p1..7, p3 may take values 1..255. The 8 slit mask positions are identified in the following table:

cwb.5. The Low-Level Brewer Command Set - 10

Slit Mask Positioin	UV Wavelength S	etting (nm)
0	Hg Calibration:	303.2
1	Dark Count :	
2	Wavelength 1:	306.3
3	Wavelength 2:	310.1
4	Wavelength 3:	313.5
5	Wavelength 4:	316.8
6	Wavelength 5:	320.1
7	Wavelength 2 & 4 for	Deadtime test

(These wavelength settings assume an HG calibration has been performed recently.)

Example:

Sample and accumulate in three channels the light intensities for slit mask positions 3, 4, 5 then in the reverse sequence 5, 4, 3. Repeat this to-and-fro sequence for 2 complete cycles. Note that this command would normally be used in conjunction with the Output command - refer to section 5.9 (OUTPUT) and section 5.1 (AGAIN) for further examples.

5.12 STATUS

Syntax: S

Description:

Transmit to the Terminal the values of six internal variables summarizing the status of the last Run command. These values are displayed as a comma-separated list:

(a, b, d) are the (p1, p2, p3) parameters of the last Run command (ie: initial slit mask position, final slit mask position, number of measurement cycles requested); c is the actual number of cycles completed when the STATUS command was issued; e is not used (always returned as 0); f is 0 if the Run command ran to completion (in which case d, requested cycles, will be the same as c, completed cycles); f is 1 if the Run was interrupted.

Example: Assume that the following Run request is transmitted to the Brewer

R, 0, 7, 6 <Return>

and that the operator interrupts the command (by typing Break - use the DELete key on the PC keyboard) after 2 measurement cycles, then issues a Status request

S <Return>

The expected response from the Brewer would be

5.13 TALK

1

Syntax:

Т

Description:

Retransmit to the Terminal the contents of the COSMAC output buffer. This is useful if a transmission error is detected (or suspected) in the previous output record transmitted by the Brewer. There are currently five commands (other than Talk) which transmit values to the Terminal: Dump, Get, Output, Status, and Z (transmit A/D channel). T will retransmit the information placed in the COSMAC output buffer by whichever of these five commands was activated most recently.

Example:

Assume that the most recent 'transmit-request' command was

which produced the following comma-separated record of 8 photon counts:

A subsequent

T <Return>

would retransmit the identical comma-separated record to the Terminal.

5.14 V: Set Baud Rate and Echo

Syntax: V, p1 [, p2] (the second parameter is optional)

Description:

Set the baud rate (and echo characteristics) of the Brewer end of the serial communications cable which links the Brewer instrument to the Terminal. The default setting is 300 bps (bits per second), echo enabled. Note that the V command cannot be issued unless both the Brewer and the Terminal are set to the same baud rate.

Parameters:

Parameter p1 takes one of six values [10, 15, 30, 60, 90, 120] corresponding respectively to the six baud rates [100, 150, 300, 600, 900, 1200]. The optional parameter p2 is set to 1 if character echoing by the Brewer is to be suppressed.

Examples:

V, 120 <Return>

Set the baud rate to 1200 bps, echo enabled.

V, 120, 1 <Return>

Set the baud rate to 1200 bps, echo disabled. (Refer to section 3: Communicating via an ASCII Terminal for further examples.)

5.15 Z: Transmit Contents of Specified A/D Channel

Syntax:

Ζ

Description:

Digitize the analog channels specified in a previously defined A/D (analog-to-digital) Table, then transmit to the Terminal the digitized values as a comma-separated record. The A/D Converter is a single-ended, 8-bit device whose output is a byte-value in the range 0...255, corresponding to an analog range of 0 to 5.0 volts. The list of A/D channels is shown in Table cwb.5-4.

A/D	Channel Name	Conversion Factor	Offset	Туріс	al Reading
Channel				Byte	Engineering
				Value	Value
0	Brewer Temperature 1	0.3620 °C/bit	-33.27	173	29.4 °C
1	Brewer Temperature 2	0.3620 °C/bit	-33.27	-	24.7 °C
2	Brewer Temperature 3	0.3620 °C/bit	-33.27		23.1 °C
3	H.T. Voltage	10.94 V/bit	-840.0	200	1348 V_
4	+15 V Power Supply	98.5 mV/bit	0	148	+14.6 V
5	+5 V Power Supply	24.4 mV/bit	0	205	+5.0 V
6	-15 V Power Supply	97.7 mV/bit	0	150	-14.7 V
7	+24 V Power Supply	117_mV/bit	0	212	+24.8 V
8	Rate Meter	1950 pulses/bit	0	200	390000
9	Not Used	-		-	
10	Not Used	-	-	-	<u> </u>
11	Not Used	-	-		-
12	+5 V Secondary Supply	24.4 mV/bit	0	210	+5.1 V
13	-8 V Secondary Supply	38.8 mV/bit	0	213	-8.2 V
14	Standard Lamp Current	10.68 mA/bit	0	150	1.6 A
15	Standard Lamp voltage	48.5 mV/bit	0	220	+10.7 V

Table cwb.5-4: To convert the returned decimal value to engineering units multiply by the appropriate conversion factor then add the listed offset. For example, a reading of 148 for the +15 V Power Supply corresponds to $98.5 \times 148 = 14578$ mV 14.6 V.

cwb.5. The Low-Level Brewer Command Set - 13

Example:

L, 20248, 0, 20249, 15, 20250, 2, 20251, 6, 20252, 255; Z <Return>

Construct a 5-byte A/D Table starting at \$4F18 (decimal 20248). The table contains four channel numbers (0, 15, 2, 6) and an end-of-table marker (255). Digitize and transmit to the Terminal the specified channels in the sequence shown. Typical output from such a command might be:

124, 56, 36, 255

j

Regulatory Information

USA:

ì

1

)

This instrument generates and uses radio frequence energy and may interfere with radio and television reception. It complies with the limits for a Class A unintentional radiator as specified in Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential or light industrial environment area. Operation of this device is subject to the following two conditions:

(1) It may not cause harmful interference, and (2) it must accept interference received, including interference that may cause undesired operation. In the unlikely event that there is interference to radio or television reception (which can be determined by turning the Brewer Spectrophotometer [Brewer] off and on), try the following:

Reorienting or relocating the receiving antenna (radio or television). Relocating the Brewer with respect to the receiver.

Any changes or modifications not expressly approved by SCI-TEC Instruments Inc. could void the authority to operate this equipment.

For more information, consult your dealer, an experienced radio/television technician, or the following booklet, prepared by the Federal Communications Commission: *How to Identify and Resolve Radio-TV Interference Problems*.

This book is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock Number 004-000-00345-4.

Canada:

This device does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

BREWER MKIII Spectrophotometer (Double Spectrometer) Operator's Manual

OM-BA-C190 Rev F Aug 1, 1995

SCI-TEC Instruments Inc. 1503 Fletcher Road Saskatoon, Sask., Canada S7M 5S5 Ph. 306-934-0101 Fax 306-978-2339

email: info@sci-tec.com web site: sci-tec.com

))

BREWER MKIII Spectrophotometer Operator's Manual

Table of Contents

			Pag
0.	Introduction		
1.	Unpacking and Setup Instructions		1-1
	1.1	Brewer Setup	1-1
	1.2	Azimuth Tracker (Option B) Setup	1-2
	1.3	Leveling the Azimuth Tracker	1-4
	1.4	Attaching the Brewer to the Azimuth Tracker	1-4
	1.5	Azimuth Tracker Maintenance	1-5
	1.6	Brewer Lubrication	1-6
2.	Getting St	arted	2-1
	2.1	Loading the Brewer Operating Program	2-1
3.	Brewer Co	ommands Overview	3-1
	3.1	Menu Organization	3-1
	3.2	Reserved Keys: HOME, DEL, Control-BREAK -	3-5
	3.3	Brewer Command Summary	3-6
4.	Daily Housekeeping Details		
	4.1	Daily Checks	4-1
	4.2	Other Notes on Possible Problems	4-1
	4.3	Designing Schedules & Processing Data without Brewer	4-2
	4.4	Field Definitions of Data Files	4-2
5.	HELP! Wh	nen Things Go Wrong.	5-1
	- 5.1	Typing Errors	5-1
	5.2	Power Failures	5-1
6.	. Configuring the Control Computer		6-1
	6.1	Introduction	6-1
	62	File Organization	6-1

OM. - 1

BREWER MKIII Spectrophotometer Operator's Manual

6.3	Brewer Software Hard Drive Installation	6-1
6.4	Configuring the Brewer Software	6-3
6.5	Editing the Brewer Software	6-5
6.6	Printer Problems	6-5

ATTACHMENTS

UVB Stability Monitoring and Data Analysis Procedures	uvb
BREWER Ozone Spectrophotometer Description and Specifications	sds
Communications	cwb

MANUFACTURER'S GUARANTEE / WARRANTY CERTIFICATE NEW PRODUCT WARRANTY AND LIMITATION OF LIABILITY

SCI-TEC Instruments Inc. hereby warrants its products to be free from defects in material and workmanship for a period of one year from date of purchase.

SCI-TEC's obligation under this warrant is strictly and exclusively limited to repairing or replacing, at SCI-TEC's discretion, any such equipment and/or parts therof which have failed under normal use and service. Expressly this warranty does not apply to any equipment and/or parts which have been improperly installed, been subject to abuse, neglect and/or accident.

The foregoing warranty is in lieu of any other warranties, expressed or implied, including without limitation, any implied warranty of merchantability or fitness for a particular purpose, and of any other obligation of liabilities whatsoever in any event for payment of any incidental or consequential damages, including, without limitation damages or injury to a person or property.

An authorization must be obtained from SCI-TEC prior to the return of any equipment or parts thereof. Returned material is to be returned to the factory, or other location as may be directed by SCI-TEC, freight prepaid and will be returned freight prepaid. SCI-TEC is not responsible for any transportation, insurance, demurrage, brokerage, duties, or councilor charges, etc.

This warranty is given to the original purchaser and may not be transferred without the direct written consent of SCI-TEC.

Should an extended warranty be purchased, then the aforementioned in its entirety is applicable for the entire period of time covered by said extended warranty.

0. INTRODUCTION

This manual describes how to operate the Brewer Spectrophotometer via an IBM compatible PC type microcomputer. Although this manual is intended to be useful for both the novice user and the experienced Brewer operator, it assumes that you are familiar with the Brewer's purpose and specifications.

Chapter 1 explains how to unpack and set up the Brewer.

Chapter 2 explains how to get started with the Brewer Software.

Chapter 3 is an overview describing how the user interacts with the Brewer Program. The Brewer Command Summary is a complete list including a brief description of the host of Brewer commands.

Chapter 4 is a collection of operating hints and guidelines.

Chapter 5 explains how to recover from various errors.

Chapter 6 explains how to configure the control computer.

The attachments contain the description of the brewer system and the description of communications between the PC and the Brewer.

OM. 0. INTRODUCTION - 1

This page left intentionally blank

1. UNPACKING AND SETUP INSTRUCTIONS

1.1 Brewer Setup

NOTE: Before accepting shipment from the carrier, inspect shipping container(s) carefully for damage. If any dents or major scratches, cuts, etc. are evident, then file a damage claim with the carrier. Only after incoming inspection and operation tests of the Brewer are successfully completed, should the shipment be accepted.

Remove the lid and foam cover from the crate containing the Brewer and carefully remove the cables, manuals and Brewer. Review sections 2 and 3 of the Operator's Manual, and set up initially as follows without the Azimuth Tracker.

Remove the Brewer case cover by unlatching the four latches. Inspect for any damaged parts. Connect the two circular connectors to the Brewer. AC power cable #BA-W12 connects to "AC POWER" and the data cable #BA-W14 connects to "COMPUTER" (Refer to Brewer cover for connector markings).

Setup the computer equipment (see figure om.1-1). Refer to the manuals for each individual piece of equipment. Note that the printer shipping screws are removed prior to use.

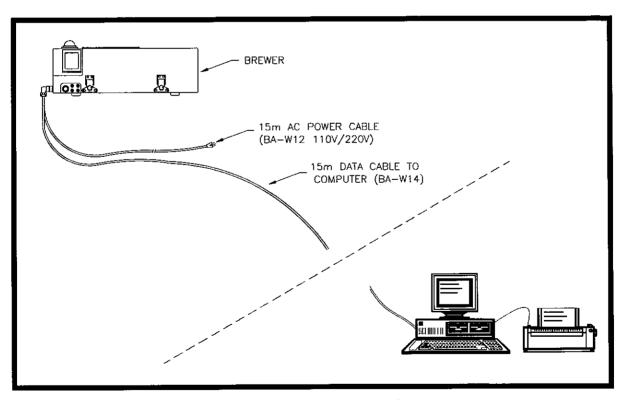


Figure om.1-1: Brewer/Computer Equipment Setup

Connect the data cable to the RS232 (Comm Port) connector on the back of the control computer. Note some computers may have a 9 pin RS232 connector in which case an adapter is required.

Plug the power cable into an electrical outlet and press the ON/OFF switch. A "click" should be heard from the slit mask inside the Brewer, the green LED should light.

The Brewer internal clock (located on the Clock Monitor board, refer to page 7.5.4-1 of the Maintenance Manual) has battery back-up. Switch SW1 is set to the middle position (OFF) for shipping. Move the switch to the left position (when facing back end of board, installed in card rack) to turn battery power to ON.

If the Brewer software is not yet configured, proceed to section 6, "Configuring the Control Computer".

After configuring the Control Computer, then proceed to section 2.1, "Loading the Brewer Operating Program", and load the operating program as per the instructions.

After reviewing section 3, "Brewer Commands Overview", perform the following operation tests:

HP HG: second spectrometer alignment and mercury lamp calibration (see table 5.1 in Acceptance Manual)

SL: standard lamp test (see table 5.2 in Acceptance Manual)

RS: run stop test (see table 5.4 in Acceptance Manual)

DT: dead time test (see table 5.3 in Acceptance Manual)

AP: A/D voltage printouts (see page 10 in Acceptance Manual)

FR HG: Micrometers/FW#3 reset and mercury lamp calibration (see table 5.1 in Acceptance Manual. The HG test first step set position should be within 5 steps of the final position. If greater than 5 steps, the micrometer #1 offset constant may need to be adjusted)

SL: standard lamp (repeat 4 times) (see table 5.3 in Acceptance Manual)

Compare the results with those in the Acceptance Manual and consult SCI-TEC if any are out of tolerance.

The Brewer and Control Computer are normally left ON at all times (24 hours a day).

1.2 Azimuth Tracker (Option B) Setup

The azimuth tracker is delivered in two parts; those being the tripod stand and the tracker enclosure (see figure om.1-2). The tripod stand can be assembled by spreading the three legs such that the pads on the ends of the legs rest on the ground, after which the supporting members from each leg are bolted to the top of the stand.

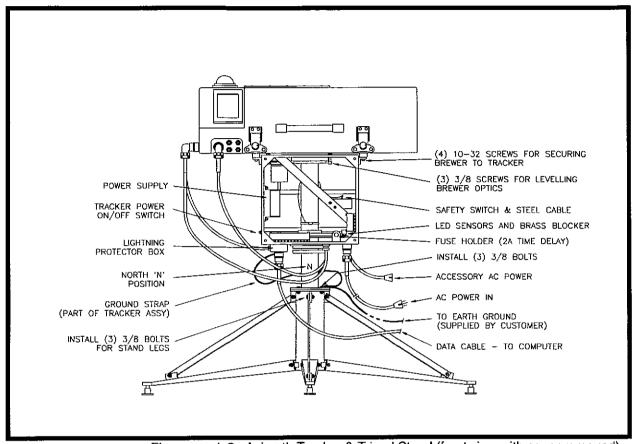


Figure om.1-2: Azimuth Tracker & Tripod Stand (front view with cover removed)

The azimuth tracker enclosure can then be bolted to the top of the stand. Ensure the north position marking "N" on the base of the pedestal points approximately north for sites in the northern hemisphere. For southern hemisphere sites, the marking "N" can be pointed approximately south (optional).

The ON/OFF switch and power indicator are located on the left side near the front of the enclosure. The switch controls the input power to the power supply for the azimuth stepping motor and drivers.

Remove the front cover of the azimuth tracker (the cover closest to the ON/OFF switch). Rotate the tracker until the blocker (brass angle 3.8 cm wide on the large circular plate on the bottom of the pedestal) is situated such that it is blocking the LED sensors. This position is defined as "zero", the front of the tracker should be pointing north. In this position, ensure that the tracker can rotate a full 360° clockwise without activating the safety switch.

The safety switch is an assembly attached to the pedestal by a steel cable. The cable is attached to the switch by nylon string with a breaking strength of 3 kilograms. The switch is set such that if a failure occurs and the tracker goes past the position sensors without detection, in either direction (CW or CCW), the switch will be activated and effectively shut power off to the tracker electronics. This usually prevents damage to data and power cables.

The allowed distance of travel from starting position is approximately +450° CW and -100° CCW before the safety switch is activated. The nylon string provides an additional safety device by protecting the switch should the operator attempt to rotate the tracker in the wrong direction after a failure has occurred. The tracker should not be operated without this safety device in place. The nylon string can be obtained at a hardware store as "8lb test fishing line".

Proper electrical grounding is necessary to ensure the lightning protector circuit will operate correctly in the event of a voltage surge. The Brewer data circuit is protected by a lightning protector box which is located on the bottom of the tracker and is connected to the stand with a braided ground strap. After the final operating location of the Brewer and tracker has been determined, a grounding wire/cable must be continued from the tracker stand to earth ground.

1.3 Leveling the Tracker

The tracker can now be leveled. Since the manufacturing process cannot ensure that the top of the enclosure is exactly perpendicular to the axis of rotation, the procedures listed below should be followed. Ensure that the tracker power is turned OFF during this procedure.

Place an accurate bubble level or clinometer on the top of the tracker enclosure with the front facing north. Slowly rotate the tracker a minimum of 270° and observe the bubble level. The bubble should remain in the same position throughout the rotation. Adjustments for the appropriate leg pads may be required to obtain this condition. Note that the bubble may or may not be in the center of the level.

After this procedure the tracker should be rotating about the local vertical to the accuracy to which the bubble can be read.

It is recommended that the supplied stand tie-down kit (chain & turnbuckle) be attached to a suitable eyebolt (~.25" dia) embedded in a concrete pad or roof beam to ensure the Brewer and stand do not move during operation. Alternately, a minimum of (3) 10 kilogram bags of sand can be used. Place one on each stand leg.

1.4 Attachment of Brewer to Azimuth Tracker

The three 3/8-24 SST bolts (rounded ends) protruding from the top of the tracker enclosure are to level the Brewer optics assembly to the tracker. The screws are preset at the factory if all the units are purchased together. These bolts fit into (3) v-grooves (under each shock mount holding the optics assembly) to form a kinematic mount.

Carefully mate the Brewer to the tracker and attach with (4) #10-32UNF x 5/8" long screws provided. NOTE: Ensure the hex tool is held straight when starting these screws to prevent cross-threading.

The AC power cable #BA-W12 supplied with the Brewer is used to power both the Brewer and the Azimuth tracker. Connect the power cable to the connector beside the short accessory power cable on the bottom of the tracker. Then connect the tracker power cable #BA-W30 (part of the tracker) to the connector marked "AC POWER" on the side of the Brewer cover. The remaining cable from the tracker

(#BA-W19) connects to the connector marked "AZIMUTH" on the front of the Brewer cover.

NOTE: For installations with 220VAC incoming power, the male plug on the power cable (BA-W12) will have to be replaced with an appropriate plug (not included) to match that of the AC power receptacle.

Connect the data cable #BA-W14 to the lightning protector box located on the bottom of the tracker. Then connect the cable which comes from the lightning protector box (#BA-W60) to the connector marked "COMPUTER" on the side of the Brewer cover.

Once all the cables have been installed and power supplied to the tracker and Brewer, the incoming AC power voltages should be measured on the accessory AC power cable (see figures om.1-2 & om.1-3) to ensure they match the specifications listed in the table below.

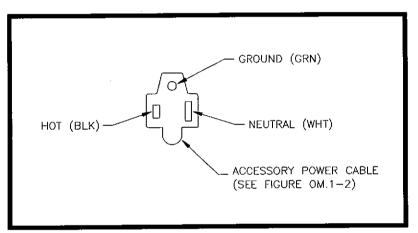


Figure om.1-3: Measuring Voltages for Incoming AC Power.

measured voltages between	220VAC installations	110VAC installations
ground & neutral	0 VAC	0 VAC
ground & hot	220 VAC	120 VAC
neutral & hot	220 VAC	120 VAC

1.5 Azimuth Tracker Maintenance

The Azimuth Tracker requires very little maintenance. The friction drive, the 25 cm aluminum drive wheel and the 1.2 cm stainless steel rod should be inspected and cleaned with a dry tissue at least every 3 months. It should be done sooner if the steps/revolution test indicates a change. This test should be done on a weekly basis as a method of confirming azimuth tracker operation. If the variance is greater than 10 steps, the cleaning procedure should be done as soon as possible.

The friction drive arm is set with 20lbs of tension on the lower spring and 8lbs on the upper spring to provide drive friction and gear mesh pressures respectively.

The system is protected with a standard 2 amp fuse in the holder at the front of the tracker, with access by removing the front cover. The power supply voltage should be checked periodically and should measure 5.30 volts.

Please do not hesitate to contact the manufacturer should you require additional information.

1.6 Brewer Lubrication

The brass gear on the zenith drive has a hole to allow a small drop of low temperature rated light oil to be applied approximately once a year.

2. GETTING STARTED

1

The Brewer Spectrophotometer operates with an IBM PC compatible computer with dual disk drives or a hard disk and asynchronous serial card. The Brewer System consists of four major components: The Brewer Spectrophotometer (which may be mounted on an Azimuth Tracker), the microcomputer, and compatible printer.

If you are setting up the Brewer System for the first time you should read the Brewer Acceptance Manual for instructions on unpacking, configuring, and testing the Brewer System.

Also read chapter 6 for more information on configuring the control computer to work with your Brewer.

- * The Spectrophotometer is connected to the RS232 Port of the PC via the 15-meter weatherproof Data Cable.
- * The printer is connected to the PC printer port.

If you have not already done so you should make a back-up copy of the Brewer Operating Program disk.

Store the original in a safe place; use the copy for the day-to-day running of the Brewer System.

2.1 Loading the Brewer Operating Program

This section details the procedures which should be carried out if your Brewer System is being readied (initialized) for the first time. It also assumes the program disk has been configured for the computer being used, i.e. proper DOS / GWBASIC operating systems, disk drives and directories allocated and bootup requirements have been observed. See Chapter 6 for details on configuring a new control computer for the Brewer.

Check that all component parts of the Brewer System are present and properly interconnected (serial communications cable from PC to Brewer; and from PC to printer), that each unit is powered by AC line voltage, and that the printer is online.

If you are running the Brewer software from diskette, insert the Brewer Operating Program diskette into drive a:, close the drive door and create a data directory (C:\BDATA) on the hard drive. To load the Brewer program, turn the PC power switch off then on or press the 3 keys, CONTROL/ALT/DEL simultaneously. The screen will display the following sequence:

```
DOS version, etc.
and files copied, etc.
```

The screen will clear, then a series of 'merging' messages will appear:

```
Merging init.rtn

op.st.rtn

inst.rtn

da_lo.rtn

po.rtn
```

The top of the screen will then display a date, instrument number, location, time, etc:

```
nov 14/89 day=311 * 03 #100 * AES HQ C.U.T. I 22:50:31 menu 652208 bytes free RS232 IN: OUT:
```

Your date, location, and instrument number display may not be the same as shown above since this depends upon when and where the program disk was last used and with which instrument. The (bytes free) is an indication of how many bytes are available on the data drive. The bytes free is calculated at the end of the initialization and reset sequence.

At this time the printer will advance the paper drive and the screen will then indicate:

```
POSITION PAPER TO TOP OF PAGE

* PRESS RETURN WHEN READY *
```

Check that the paper is positioned correctly in the printer at the top of form position with the fold about 0.5 inch (12 mm) above the print-head. This ensures that the printouts will be neatly arranged with proper margins at the top and bottom of each page. Now press Return or wait about 15 seconds.

The instrument constants will now be printed:

Your values may differ, for these constants are instrument specific and no two instruments are identical. Do not concern yourself with these constants at this time for they have been set by the manufacturer and need only be changed after an instrument repair. If the wrong instrument # file appears then after the reset, etc. the NO command will have to be used to select the correct instrument.

The PC will then issue a reset command to the Brewer, and will wait 7 seconds for the Brewer to respond:

```
RESET IN 7 SECONDS...6...5...4...3...2...1
```

After the 7-second count down the PC should briefly indicate

```
ASKING BREWER TO RESPOND:
```

Before displaying and printing the power-up message transmitted by the Brewer:

```
BREWER SPECTROPHOTOMETER
#050
AES SCI-TEC
CANADA
VERSION 39.10 FEB 1, 1994
```

The top two lines of the screen should show the time, communications activity, date, location, and instrument number:

```
nov 14/89 day=311 * 03 #100 * AES HQ C.U.T. I 22:50:31
menu 652208 bytes free RS232 IN: OUT:
```

The C.U.T. (Coordinated Universal Time) is a display of the Brewer's internal clock in hh:mm:ss format;. 'RS232 IN: OUT:' is an indicator of input and output communications between the computer and the Brewer. These two status lines are always updated except when the PC is recording data.

Below the status lines should appear one or more 'INITIALIZING' messages:

```
*** INITIALIZING BREWER MOTORS ***

*** ZEROING ZENITH

*** ZEROING AZIMUTH
```

During each step the PC and Brewer are in communication with each other. Confirm this by watching the "RS232 IN: OUT" display at the top of the screen: character (*) should appear to rapidly alternate back and forth in the spaces following the "RS232 IN: OUT". If your Brewer System is fully automated then allow all the above steps to run to completion (if the azimuth tracker is not being used then press DEL key to abort the zeroing azimuth operation). DO NOT ABORT if the azimuth tracker is operable since this will cause a false zero to be assumed by the Brewer internal

micro-computer. If the ZEROING ZENITH and AZIMUTH message do not appear then check the instrument configuration file (IC command) for proper settings.

The zeroing of the Azimuth Tracker will take approximately two minutes. When finished, the printer will display:

```
Azimuth zeroed at 09:10:20 Discrepancy = N
```

where the discrepancy value, N, is usually a small positive or negative number (following power on start up N will be large). The discrepancy is the difference between the actual and the microprocessor stored zero-step position for the Azimuth Tracker.

The initialization is now complete. The date and location were read in from the program disk and represent when and where the program disk was last used. The time was read in from the Brewer clock. These parameters (which are displayed at the top of the screen) are now used to calculate where the sun is and an automated Brewer/Tracker System should align the Brewer toward the sun. If any of the time, date, or location fields are not correct, they will have to be updated with the TI (time reset), DA (date reset) or LL (location update) routines.

After the program has positioned the Brewer to face approximately toward the sun (this takes between 30 and 60 seconds) the screen will display the Main Menu:

```
nov 14/89 day=311 * O3 #100 * AES HQ C.U.T. I 22:50:31
menu 652208 bytes free RS232 IN: OUT:
```

Enter a desired Brewer command or select a submenu from the following list

command	main menu
dm	data management menu
om	operating menu
tm	test menu
hk	housekeeping menu
up	update menu
sm	summaries printout menu
sp	special operating menu
os	operational setup menu
em	extended menu

Note the screen clock indicator to the left of the time of day display. The "I" indicates the internal clock of the Brewer is in use and an "E" indicates the computer clock is in use. If the clock error message is received 4 times, then the internal clock is turned off and the time is controlled by the computer. When the time is set later, the operator is asked if he wants the Brewer clock turned back on before setting the time.

When the Brewer is taking its common operational measurements in O₃ operation, the above display is replaced with an information box which contains daily mean of DS ozone, ZS ozone, DS SO₂, last DUV result, last SL R6 result and HG temperature information. An example of this display is shown below.

nov 14/89 day=311 * 03 #100 * AES HQ C.U.T. I 22:50:31 menu 652208 bytes free RS232 IN: OUT:

*** taking ds measurement ***

Press HOME to stop

Mean d	ls	03	274	. 2
Mean 2	zs	03	270	. 2
Mean d	is S	502	+0	. 5
DUV			47:51	57.0
SL R6	at	07:	45:19	1904
Last HG	at	12:	49:15	26°C
Current	ter	nper	ature	27°C

This page left intentionally blank

}

3. BREWER COMMANDS OVERVIEW

3.1 Menu Organization

The Main Menu gives information on how to enter the Brewer commands as well as how to access one of the nine secondary menus.

(1) Dat	a Management Menu	(DM)
(2) Ob:	servations Menu	(OM)
(3) Tes	st Menu	(TM)
(4) Ho	usekeeping Menu	(HK)
(5) Up	date Menu	(UP)
(6) Sui	mmaries Printout Menu	(SM)
(7) Sp	ecial Operations Menu	(SP)
(8) Op	erational Setup Menu	(OS)
(9) Ext	tended Menu	(EM)

A notable feature of this menu system is that it has an 'open' structure: any command which appears on one of the six menus can be directly accessed from any of the six menus, as well as from the Main Menu. Thus the 'menus' serve as 'help' screens rather than strict menu-selection instructions.

Note that there is also a menu of "non-menu" items (NM) that can be viewed. These commands should NOT be run by the user; the program automatically accesses them when required.

The nine secondary menus, and the non-menu items, are listed below:

DM: DATA MANAGEMENT MENU

command	data management menu
dd	print data directory
dds	display data directory
1d	long data format
sd	short data format
nđ	initialize new data disk
nr	no data recording
di	turn on data recording
pn	turn printer on
pf	turn printer off

command	data management menu
pd	print to disk
dq	play back data (Bxxxx)

OM: OBSERVATIONS MENU

command	observations menu
đs	direct sun
£m	focused moon
fz	focused sun
sc	direct sun scan
SS	direct sun UV scan
ua	time extended UV scan
uf	fast UVB scan
um	umkehr measurement
uv	UV scan
ux	extended UV scan
zb	zenith blue
zc	zenith cloud
zp	zenith perpendicular
zs	zenith sky

TM: TEST MENU

command	test menu
ci	slit 1 scan
dsp	dispersion test
dt	dead time
gs	grating synchronization
hg	mercury lamp calibration
hv	high voltage adjust
rs	slit mask run & stop
sh	slit mask timing
sl	standard lamp calibration
sr	azimuth steps-per-rev
tt	setup teletype control
tu	test UVB alignment

HK: HOUSEKEEPING MENU

command	housekeeping menu
ро	prints out instrument info
ap	print a/d monitor

command	housekeeping menu
az	zero azimuth tracker
ze	zero zenith drive
cf	edit instrument constants
hp	second spectrometer align
ic	edit system configuration
lf	edit station locations
si	manually site the sun
sim	manually site the moon
re	resets instrument
fr	reset FW#3 and micrometer
st	read instrument status

UP: UPDATE MENU

command	update menu
da	change date
11	change location
no	change instrument number
te	change temp (39°C/4.25v)
ti	change time
co	add comment

SM: SUMMARIES PRINTOUT MENU

command	summaries printout menu
sum	make daily summary file
ed	initiate end-of-day sequence
ed-pd	end-of-day (print to disk)
ub	DUV summary
dssum	direct sun summary
fmsum	focused moon summary
fzsum	fz zone summary
hgsum	mercury lamp summary
ozsum	03 data summary
s1sum	standard lamp summary
tcsum	update summary with new TC
uvsum	03 uvb summary
zssum	zenith sky summary

SP: SPECIAL OPERATIONS MENU

command	special operations menu
cz	custom scan
ex	exit to DOS
qs	quick lamp scan
shell	shell to DOS
ul.	UV lamp scan
xl	extended UV lamp scan

OS: OPERATIONS SETUP MENU

command	operations setup menu
су	set slit mask cycles
au	setup auto command sequence
auc	repeat au
cs	setup command sequence
sa	make printout of solar angles
se	edit a schedule
sk	run a schedule today
skc	run a schedule continuously
o3	switch to ozone mode (MKIV only)
n2	switch to NO2 mode (MKIV only)
w0-w4	waits (1/5/10/20/30 min.)

EM: EXTENDED MENU

command	extended menu				
b0	lamps off				
b1	mercury lamp on				
b2	standard lamp on				
ddp	print program directory				
ff	printer form feed				
tr	turn tracker on				
tf	turn tracker off				
sleep	end operations				
end_day	<pre>sum & print (month/day/year)</pre>				
as	point tracker to the sun				
pz	point to zenith				

All menus display the MU (air-mass) and ZA (solar zenith-angle) settings which will be continuously updated during the course of the day, as well as the C.U.T., date, instrument number, location and data bytes available. Pressing the Return key without a command entry causes the Main Menu to reappear.

To select a command, type the appropriate character code displayed in the menu, then press the Return key.

3.2 Reserved Keys: HOME, DEL, CONTROL/BREAK

HOME Key

Press this key to terminate an observation or operation prematurely. This key should not be used unless the message " press HOME key to abort " is displayed on the screen.

DEL Key

This key is not normally used for routine work. It can be used in an emergency to bypass the five-minute warm-up period of the mercury or standard lamps (do not make a habit of using the key for this purpose since it is important that the lamps be fully warmed). This key is also used to terminate some operations, e.g. zeroing azimuth if no tracker present and in Teletype mode (TT).

CONTROL/BREAK Keys

These keys allow you to temporarily halt the Brewer Program so that you can access the GW-BASIC operating system.

Once the CONTROL/BREAK keys have been pressed you should see:

BREAK IN XXXX

(PROGRAM LINE #)

OK

You now have full access not only to all GW-BASIC commands, but also to the Brewer Program itself.

There are two ways to reactivate the Brewer program:

* Instruct the program to 'continue' by typing:

CONT (RETURN)

* The two-line status display should return to the screen. If the program cannot continue, or if the message 'syntax error' or RESUME error is displayed then type

RUN (RETURN)

This should restart the program from the beginning provided that the in-memory copy of the Brewer Program is intact. If this fails, then the program will have to be reloaded from disk - use the (CONTROL/ALT/DEL) method.

3.3 Brewer Command Summary

This section is an alphabetical listing of each Brewer command, complete with a brief description and an indication of the menu in which the command appears. The commands are printed here is capital letters but only small letters are allowed by the software. Furthermore the important tests and measurements are identified with the designators: DAILY, WEEKLY, or TEST. The commands marked DAILY can be used in schedules. The commands marked WEEKLY or TEST are special and should not be used in schedules since they need operator interface. Note that only 2 letter commands can be used in schedules.

AP Print Out A/D monitor

(HK menu) DAILY

prints instrument values captured by the 16 A/D channels. It is important to monitor +5V PS as a minimum. The command sequence APDTRS (AP followed by dead time test and then run/stop test) should be programmed once in each schedule. Ensure printer is on for this series of tests.

AS Azimuth to Sun

(EM menu) TEST

if brewer has not been taking measurements then the azimuth tracker stops. This command moves the tracker to the sun.

AU AUtomatic operation

(OS menu)

sets the Brewer System in fully automated mode whereby it follows a predetermined sequence of commands (HG, DS, ZS, DS, ZS, DS, ZS, DS, ZS, UX) until the evening (MU = 8.5), at which time the system produces a daily summary. An operator is required to restart the AU routine the following day. This command is often used in schedules during the mid-part of the day.

AUC AUtomatic operation (Continuous)

(OS menu) TEST

is similar to the AU command, except that the predetermined sequence of commands will control the Brewer System for several days of unattended operation.

AZ Zeroing Azimuth Tracker

(HK menu) TEST

re-orients the Brewer/Tracker System to its zero-step position. This is a useful test for checking Azimuth Tracker operation and can be used in schedules if desired.

BO turn off lamps

(EM menu) TEST

B1 turn on Mercury Lamp

(EM menu) DAILY

is useful in schedules or command sequencing, e.g. b1dshg. This sequence allows a DS to be taken while the lamp is warming up for a HG test. The lamp will be turned off at the end of the HG test; however ensure in schedules that there is enough time between zenith angle entries for the tests to be completed or the lamp can be left on.

B2 turn on Standard Lamp

(EM menu) TEST

can be used in schedules like B1 above, however be careful that it is not left on for long periods waiting for the next operation or moon to rise for example.

CF update instrument Constants File

(HK menu) TEST

permits the operator to revise the instrument constants. Necessary when the instrument has been re-calibrated following a repair. DO NOT CHANGE any constants without the agreement of SCI-TEC.

CI Lamp scan on slit 1 (TM menu) TEST for scanning either the internal mercury or standard lamps. Note that you must turn the proper lamp on first with the B1W1CI commands, e.g. HG lamp on, wait 5 minutes then scan. The data is stored in the Cldddyy.### file in a format ready for graphing which includes a log of counts/sec in the last column.

CO

DI

COmment line (UP menu) TEST permits the operator to enter comments (describing sky clarity, blueness, cloud cover, etc.) Comments are printed and are recorded in the data file.

CS Command Sequencing (OS menu) TEST sets the Brewer System on temporary automatic mode of operation whereby it follows a user-specified sequence of commands a given number of times.

CY slit mask CYcle setting (OS menu) TEST permits the operator to change the number of slit mask cycles per observation run (usually set at 20).

CZ Custom scan

(SP Menu) TEST
special scan capability permits the operator to make a custom scan of internal lamp,
external lamp or sky from the quartz window or UV dome. Records setup in CZ.CFG
file for automatic repeating of test if desired. The data is stored in the CZdddyy.###
file.

DAte update

allows the Brewer's calendar date setting to be changed. Under continuous operation with the computer connected to the Brewer, the calendar date will switch at 24:00 C.U.T. However operators should check the screen daily for proper date and time. Julian day will change at solar midnight. To enter a new date type DA, then enter numeric day (2 digits), 01 for 1st, etc. and similarly with the month and year. Press return after entering the year.

DD Disk Directory (DM menu) DAILY prints the directory of the data-storage disk.

DDP Program Directory printout (EM menu) TEST prints the program directory.

DDS Data Directory display to the screen (DM menu) TEST

Dlsk recording (DM menu) instructs the system to begin recording data to the disk drive specified in the constants file. If the DISK TURNED OFF! message appears at top of the screen then the DI command must be issued to correct the fault. The NR command disables data-recording. The DISK TURNED OFF! message appears if the data disk is full or not installed.

DM Data Management menu (Main Menu) TEST displays the Data Management Menu. This menu provides commands which control disk operations, data-output formatting, and production of daily data summary printouts.

Direct-Sun observation (OM menu) DAILY executes an O₃ / SO₂ or NO₂ observation with the instrument oriented towards the sun. Data is printed, and normally stored on disk. The ground-quartz plate is in (Filter #1 position #1) for O₃ (for NO₂ position #4), iris is closed and Filter #2 automatically selects the correct neutral density filter before this measurement starts. The Brewer

performs a series of five (20 cycle) observation runs. The raw photon counts and the dark count of the five wavelengths and a calculation of ozone and sulphur dioxide is printed after each observation. After the fifth scan a set of summary statistics are printed and the data stored on disk. At the end of each run, the slit #5 counts are checked and if counts are greater than 4 million, measurement is terminated. This is provided for cloud conditions.

DSP

DiSPersion test

(TM menu)

collects data for a dispersion test analysis. This test is used to determine the absorption coefficients, wavelength versus step number constants and resolution versus step number equations for each slit.

DSSUM

Direct-Sun data SUMmary

(SM menu) TEST

instructs the PC to print the daily data-summary of all DS observations made during the local day.

DT

photomultiplier Dead time Test

(TM menu) DAILY

is an instrument test which measures the dead time of the photomultiplier and photon-counting circuitry at high and low intensity levels from the standard lamp. The results should agree within 5% of the constant for the instrument. This test should be done at least once a day and results printed, e.g. the sequence APDTRS is included in ED sequence.

ED

End of Day

(SM menu) TEST

initiates the following sequence of end-of-day commands: SUM, OZSUM, FMSUM, FZSUM, HGSUM, SLSUM, UVSUM, PO, AP, DT, RS, RE, FR and HP. This operation is performed automatically when in schedule operation at local midnight. It is not necessary to program ED in the schedules.

ED-PD

)

End of Day - Print to Disk

(SM menu)

performs an end of day (ED) identical to ED, except that all data is printed to a disk file instead of on a printer. This is useful if you wish to save paper.

EM

Extended Menu

(Main Menu)

displays the extended menu. This menu contains options for controlling the lamps (such as B0), the tracker (such as TF and AS), and so on.

END_DAY

END of DAY

(EM menu) TEST

performs an end of day (ED) on previous dates, e.g. type END DAY Apr 28/89 and if there is a day file (B11989.011) on the data disk then a SUM file is created and the summaries are printed.

FF

Form Feed

(EM menu)

forces a form feed on the printer connected to the computer.

FΜ

Focused Moon Observation

(OM menu) DAILY

executes an O₃ / SO₂ observation with the Brewer oriented towards the moon. The normal-filterwheel setup is Filter #1 to position #3 (open) and Filter #2 to position #0. The Brewer performs a series of five (80-cycle) observation runs. The rest of the measurement is like a DS observation and the same constants are used to calculate the ozone and sulphur dioxide or nitrogen dioxide.

FMSUM

Focused Moon SUMmary

(SM menu) TEST

instructs the PC to print the daily data-summary of all FM observation made since the previous local midnight. Note the command will only work if the summary file for that day exists. This command is performed automatically under SKC operation or with the ES or ED command in O3/SO2 operation. FR

Filter wheel #3 Reset and micrometers reset

(HK menu) TEST

is a test which measures the offsets of the two micrometers and FW #3 motors steps between the present setting and the reference diode(s). The motors are repositioned to the instrument offset constants. The offset constants are stored in the instrument constants file.

FZ

Focused sun observation

(OM menu) DAILY

a low sun angle (high zenith angle) direct sun type of measurement that corrects for scattered radiation. The scattered radiation signal is measured by off-setting the suns image from the entrance slit by 1°. The scattered signal is then subtracted from the focused (direct) sun signal to give better representation of the incoming direct radiation. This routine will give reasonably accurate values down to solar elevations of 5° (airmass=8.2) compared to 10°-20° (airmass=5-3.2) without corrections.

FZSUM

Focused sun SUMmary

(SM menu) DAILY

instructs the PC to print the daily data summary of all FZ observations performed that day.

GS

Grating Synchronization

(TM menu) TEST

performs a standard lamp scan on slits 1 through 5. The standard lamp must be turned on by the operator before the GS routine is run. Once complete, the routine writes to the gsdddyy.### file which can later be analyzed using the RD_GS analysis program. Before performing the GS scan it is recommended that several HG and SL calibrations are run before hand.

HG

Mercury wavelength calibration test

(TM menu) DAILY

is a frequently conducted test which precisely locates the mercury-line spectrum, then re-positions the micrometer so that the diffraction grating disperses the five operational wavelengths onto the appropriate exit slits. If the micrometer is in the wrong position and the test fails then the diode offset is measured and the micrometer is re-positioned to the diode offset constant value and the test is re-started.

HGSUM

Mercury lamp data SUMmary

(SM menu) TEST

instructs the PC to print the daily data summary of all HG tests conducted that day.

HK

HouseKeeping menu

(Main Menu)

displays the housekeeping menu. This menu contains routines needed for general maintenance such as IC, RE, FR and so on.

HP

second spectrometer alignment

(TM menu) TEST

to coordinate the positions of the individual spectrometers. The internal standard lamp is used as the throughput signal to be optimized to the PMT. Five attempts are made to achieve a specified correlation. If after five scans the test is not successful, both micrometers are reset to their offset constant positions and the test repeated.

HV

High Voltage test

(TM menu) TEST

is an instrument test that determines the optimal high-voltage setting for the photomultiplier. This test is normally performed at the factory before the Brewer is shipped to the customer. It would only be performed by the user after repair or replacement of one or more of the instrument's optical or mechanical components, or when correct instrument performance needs to be verified.

IC

Instrument Configuration

(HK menu) TEST

displays the current status of the Instrument's Configuration (a list of upgrade options either present or not present) on the screen, and allows switches to be made.

Long Data output format to printer (DM menu) TEST sets the printer data-output to expanded format (the default setting is SD: short

data-output format). If LD appears in the DM menu then the current mode is SD

(short) format.

LF Location File update (HK menu) TEST

displays the list of the location names and geographical coordinates of known Brewer instruments sites throughout the world and allows changes to be made.

LL Location update (UP menu) TEST

permits updating the location coordinates (latitude, longitude) and the location identifier at the top of the screen. Normally used when the instrument is on a moving observation platform (eg. airplane or ship) and when an instrument is first used at

a different site.

ND New data Disk (DM menu) TEST

formats a new data disk for the user.

NO instrument Number (UP menu) TEST

permits the disk-stored instrument identifier to be changed in the event the program

disk is used with another instrument.

NR No data Recording (DM menu) TEST

instructs the PC to shut off data recording. However, the data will still be printed. Use the DI command to re-enable recording. Note when the NR command appears on the Data Mangement menu it means that the system is currently recording data.

OM Operating Menu (Main Menu) TEST

displays the Operating Menu which is a listing of command codes for frequently

used observations and instrument tests.

OS Operational Setup Menu (Main Menu)

displays the operational setup menu. This menu contains routines that are needed when the program is configured to work with a new or different Brewer instrument.

OZSUM OZone data SUMmary (SM menu) TEST

instructs the PC to print in chronological order the daily data summaries of the DS and ZS ozone observations made during the local day. Stores daily statistics in a

OZOAVG.### file.

PB data PlayBack (DM menu) TEST

allows the operator to select any day's stored data file and have it printed. Enter filename only (i.e. B11889 without the extension). This operation was designed mainly for correcting data e.g. with new temperature co-efficients, and so a new data

file entitled OP11889.011 is created on the data disk.

PD Print to Disk (EM menu) DAILY

directs printer to a file. Data will be written to a "D" file on disk. Note: use PF

command to close file after use.

PF Printer oFf - saves paper (DM menu) DAILY

PN Printer oN. (DM menu) DAILY

PO PrintOut instrument constants

(HK menu) DAILY

allows the user to print the contents of the instrument constants file. (Frequently used as a convenient means for checking the top-of-form position for the printer.)

PZ Point to Zenith

(EM menu) TEST

sets the zenith motor-drive to zero degrees zenith angle, i.e., the zenith prism is pointing vertically upwards.

RE REset and initialize Brewer motors

(HK menu) DAILY

sets all installed Brewer motors (except for micrometer motor) to their zero position: the azimuth, zenith, FW#3 and micrometer motors move to optically-sensed end-stops; the other motors move into mechanical endstops.

REP REPort

(-)

displays the following instrument average files, or their NO2 equivalents if a MKIV Brewer is in NO2 mode: SLOAVG, HGOAVG, APOAVG, DTOAVG, MIOAVG and RSOAVG. The range of days to print or view is selectable.

RS slit mask-motor Run/Stop test

(TM menu) DAILY

is an instrument performance test that verifies whether the slit mask motor is operating correctly or not. In schedule (SKC) operation it is recommended that this test be done at the end of the day with the analog voltage and dead time test as follows: APDTRS (O3) or the ED/ES routines can include these tests. The RUN/STOP ratios for slit mask positions 2 through 6 should be in the range of 0.997 to 1.003.

SA Solar Angle printout

(OS menu) TEST

is a separate routine which will calculate and print the solar and lunar angles versus time for the day and location in use.

SC SCan test on direct sun

(OM menu) TEST

is an instrument test which determines (O₃ only correct operations setting of the wavelength-adjusting micrometer. This test is normally performed at the factory before the Brewer is shipped to the customer. It would only be performed by the user after repair or replacement of one or more of the instrument's optical or mechanical components, or when correct instrument performance needs to be verified. Performs a scan and outputs the results at each micrometer position selected to disk and printer. A graph is produced on the printer which allows the operator to determine if the setting is correct. This command may be used in schedules; even if the printer is off with the PF command, the graph will be printed.

SD Short Data output format to printer

(DM menu) TEST

sets the hard-copy output to condensed format which is the standard default setting. See also LD command (long format) for further information.

SE Schedule file Edit

(OS menu) TEST

allows the user to create or revise a daily observation schedule for the Brewer. Command sequences are carried out at user-specified solar zenith angles. The schedule files are named by the operator and stored on the program disk with *.skd extensions.

Note the special key ^ (shift 6) which when pressed is displayed at the top right of the table. When activated the INS and DEL keys insert and delete entire lines in the schedule. Pressing the ^ key a second time disables this function. When editing is complete and Control-END keys are pressed, the screen displays 'NEXT DAY'S

SCHEDULE NAME? which allows you to call a different schedule if desired. This allows chaining of different schedules.

SH Slit mask-motor timing test

(TM menu) TEST

is an instrument test that determines the optimum value for the timing constant used in the control of the slit mask motor. This test is normally performed at the factory before the Brewer is shipped to the customer. It would only be performed by the user after repair or replacement of one or more of the instrument's optical or mechanical components, or when correct instrument performance needed to be verified.

SI Siting of sun

)

(HK menu) TEST

allows fine-tuning of the orientation of the Brewer/Tracker System from the pushbutton switches on the Brewer (default) or from the keyboard. The image of the sun should be precisely aligned on the entrance slit. This of course means that the sun should be centered in the iris. During a direct sun (DS) measurement the siting can be checked by looking down the iris and ensuring the sun is going through it. If the alignment is not correct then first perform reset (RE) or azimuth zero (AZ) before making adjustments with the SI command. This is because if the Brewer has been properly installed then the horizon and north correction steps should remain constant. If siting changes persist then it is an indication that some servicing of the tracker or zenith drive is necessary, or the tracker is not level.

SIM Slting Moon

(HK menu) TEST

similar to SI siting on sun except the Brewer is pointed at the moon. For good moon observations, the image of the moon must be precisely aligned on the entrance slit. Note since the ground quartz is out for focused moon measurements during a FM observation, the entrance slit can be viewed for proper alignment. If the alignment is not good, then proceed as described above (SI) with the reset or azimuth zero (AZ) first, since the tracker, for example may have slipped.

SK Schedule operation

(OS menu) TEST

sets the Brewer System in the schedule made whereby it follows a predetermined schedule of command sequences for the rest of the current day. (To edit the schedule use the schedule edit (SE) commands). The program returns to the Main menu when the daily schedule has finished.

SKC Schedule operation (Continuous)

(OS menu) TEST

similar to the SK command, except that observations are resumed on subsequent mornings according to predetermined schedules. The schedule for the following day is not necessarily the same as that for the previous day. Schedule linking on a day-to-day basis is achieved with the schedule edit (SE) routine.

SL Standard Lamp test

(TM menu) DAILY

is a very important test which takes intensity measurements of an internal quartzhalogen 'standard' lamp at the five operational wavelengths. Used as a general quality-assurance examination of the instrument's performance. It is recommended that the SL test be run at the start and end of each local day as a minimum. Note that the HG test should be done before each SL test. The last two ratios (R5 and R6) and the intensity of the first wavelength F1 should be carefully monitored and any changes noted and examined.

SLEEP

SLEEP mode for computer screen

(EM menu) TEST

not normally used. When operational, the operator must press the key C to wake up computer software.

)

)

SLSUM Standard Lamp data SUMmary (SM menu) TEST instructs the PC to print the daily data summary of all SL tests conducted that day. SM **Summaries printout Menu** (Main Menu) displays the summaries printout menu. This menu contains all summary routines used by ED, as well as other summary reporting methods. SP (Main menu) TEST SPecial operating menu displays the Special operating Menu which contains a listing of less frequently used operations and setup tests. SR azimuth tracker Steps-per-Revolution (TM menu) WEEKLY is a calibration test which determines the number of steps required for the Azimuth Tracker to turn the Brewer through 360 degrees in azimuth. The tracker first zeros itself and outputs a discrepancy value; then it turns 360 degrees clockwise. The Steps/rev are output to the printer and should be close to 14680 steps. The test should be done weekly and if the value changes over time then servicing is required. (OP menu) DAILY SS direct Sun uvb Scan very similar to the UX routine except the zenith prism (the field of view) follows the sun through the quartz window. The scan is performed from 2900 to 3630 Angstroms in ascending order only. Instrument response files for this type of scan are not available. brewer STatus and control (HK menu) TEST ST permits the operator to switch the mercury and standard lamps on and off, and to control all installed stepper motors except the slit mask motor. (SM menu) TEST SUM SUMmary data file instructs the PC to scan the current day file (e.g. B11889.011) and store on disk the data-summaries information of each measurement into a new file entitled e.g. S11889.011. The Umkehr data is processed and put into a separate file entitled e.g. U11889.011. Note this SUM operation and summary printouts are performed automatically at local solar midnight when the Brewer is in schedule (SKC) operation or with the ED (end of day) command. (UP menu) TEST TE **TEmperature printout** prints out the current Brewer temperature in degrees Celsius and its equivalent voltmeter reading (decimal fraction between 0 and 5.00 volts). (EM menu) TEST TF Turn ofF zenith tracking shuts off the zenith stepper motor; the TR command line appears in place of the TF line on the Update menu. The default setting is motor on and TF appears in the menu. TI (UP menu) TEST TIme reset permits the operator to reset the Brewer's internal clock, providing the clock option is turned on in the instrument configuration IC file. Brewer time must be GMT or

C.U.T., Co-ordinated Universal Time. Enter a six-digit time setting (hhmmss) in six key strokes and press RETURN to set the PC and Brewer clocks. If either or both the Brewer and it's controlling computer lose power, the Brewer clock will update

the computer clock upon resuming operation.

TM Testing Menu

(Main menu) TEST

displays the Testing Menu: a directory of commands pertaining to instruments tests which are normally conducted at the factory.

TR

TuRn on zenith tracking

(EM menu) TEST

turns on the zenith tracking motor: the TF command line appears in place of the TR line on the Update Menu.

π

)

TeleType communications to brewer

(TM menu) TEST

sets the PC program to its 'teletype' mode, allowing the operator to directly control the Brewer with a set of low-level commands.

TU

Test Uvb Alignment

(TM menu) TEST

Using an external quartz-halogen lamp over the UVB-dome, the TU test finds the step position of the zenith prism for which the light intensity is a maximum through slit 1 of the spectrometer. This test should be performed if alignment problems are suspected. The results should then be compared with those given in the Brewer Acceptance Manual (typically 2112±4 steps).

UA

time extended UV scan

(SP menu) TEST

is similar in purpose to the UX routine. The primary difference is that an extended UV scan will be started on the next half hour. No DUV calculation is performed and the name of the output data file is formatted as UVdddyy.###.

UF

Fast uvb scan

(SP menu) TEST

is similar in purpose to the UV routine. The difference is that the UF scan is performed in the ascending wavelength direction only. Four cycles are observed if the wavelength is below 3000 Angstroms otherwise two cycles are observed. All data is recorded as a 1 cycle observation. The scan writes to the UVdddyy.### data file. When scanning is complete, a calculation of the UVB/UVA McKinley-Diffey weighted irradiance is outputted to the printer and appended to the DUVdddyy.### file.

UL

UV-B Lamp scan test

(SP menu) TEST

is a UVB scan of a 12V, 50W external Tungsten-Halogen lamp. This test is identical to a UV scan aside from the step increment being 3.5 nm instead of 0.5 nm (reference Operator's Manual sds.4). Data from UL scans are stored in a separate file (ULdddyy.### format) and are used by BASIC programs BREWIRR.BAS and BREWRESP.BAS to calibrate UVB external lamps and recalculate Brewer responsivity respectively.

UM

UMkehr observation

(OM menu) DAILY

performs standard Umkehr (O3-layer) observations. Clear sky conditions are necessary for good results. It is normal that this observation is controlled under schedule (SKC) operation in the early morning or late afternoon between solar-zenith angles 69° and 95°. The zenith prism is set skyward and the Brewer is oriented perpendicular to the solar azimuth. Observations must be terminated by the operator or in schedules by the next zenith angle entry. Umkehr measurements are made using two sets of wavelengths: 'short' (310 to 320 nm and 'long' wavelengths (320 to 330). The data is put into the "B" day file on disk and during the SUM command process a separate file containing only the Umkehr data; (which begins with "U").

UP UPdate menu

(Main menu) TEST

displays the Update Menu. This menu contains commands which update instrument settings stored on the program disk.

UV

UV-B wavelength scan

(OM menu) DAILY

measures the UV-B irradiance across the 'B' region (2900-3250 Angstroms) of the ultra-violet spectrum using the quartz dome viewport. Filterwheels #1 & #2 both move to open apertures and the zenith prism moves to the UV port. Note the instrument configuration file must have the UV option turned on (yes) for this test to execute. Furthermore, an instrument responsivity file (UVRES.##) must be in the data/### directory and setup in OP_ST.### file for correct irradiance calculations. The Brewer scans forward and backward through the wavelength region at 5 Angstroms increments and with 4 cycles of sampling at each point. When scanning is complete, a calculation of the combined UVB/UVA McKinley-Diffey weighted irradiance is outputted to the printer and appended to the DUVdddyy.### file. A correction is made to the Diffey action spectrum to include the effects of the UVA region (3250-4000 Angstroms).

UVSUM

UV data SUMmary

(SM menu) TEST

instructs the PC to process and print the data summary of all UV measurements (including UX, UF, UA scan data) conducted that day. The DUV values are calculated for each UV measurement only so a proper responsivity file (UVres.###) must be available on the disk. The routine also appends to the UVOAVG.### file the following information: Julian day, daily DUV integral (Joules/m²), length of day (time from first to last uv scan), number of uv scans and the average hour during which the uv scans were taken.

UX

eXtended UV wavelength scan

(OM menu) DAILY

is similar in purpose to the UV scan. The wavelength region scanned is 2865-3630 Angstroms in ascending direction only. Four cycles are observed if wavelength is below 3000 Angstroms, otherwise two cycles are observed. All data is recorded as a 1 cycle observation, utilizing exit slits 1 & 5. The name of the output file is formatted as UVdddyy.###. When scanning is complete, a calculation of the UVB/UVA McKinley-Diffey weighted irradiance is outputted to the printer and appended to the DUVdddyy.### file, assuming a proper responsivity file (UVRES.###) is in the data directory (\BDATA\###).

XL

eXtended external lamp scan test

(SP menu) TEST

is similar in purpose to the UL test except that the wavelength range scanned is 2865-3630 Angstroms. The observations are incremented at 5 Angstroms in an ascending order. 30 cycles are observed if the wavelength is below 3000 Angstroms, otherwise 20 cycles are observed. All data is recorded as a 1 cycle observation, utilizing exit slits 1 & 5. The name of the output data file is formatted as XLdddyy.### and is to be processed by external utility programs that generate external lamp irradiance files and Brewer responsivity files.

ZB,ZC,ZS

Zenith-sky observations

(OM menu) DAILY

all commands instruct the Brewer to execute seven measurement runs in which the zenith prism is oriented vertically and the Azimuth Tracker is set towards the sun. The three command codes refer to three distinct sky conditions: ZB for zenith-blue ('clear'), ZC for zenith-cloud ('obscured'), and ZS for zenith-sky ('variable'), - used primarily in schedules. The filterwheel setup is both Filters to positions #0, which puts the polarizer element in for the zenith measurements. Note on recent instru-

ments that a film polarizer is used in Filter #1 position #0 and the original instruments had permanent polarizing prisms installed in the rear fore-optics.

ZΕ ZEroing zenith drive (HK menu) TEST

repositions the zenith prism to its zero-step position (at the lamps). The zenith diode is found and the prism is moved a constant (zenith offset) number of steps to the lamps (hard stop) position or zero-step

ZΡ

Perpendicular Zenith observation

(OM menu) TEST

is an (infrequently conducted) variation of the ZS observation in which the Azimuth Tracker orients the instrument perpendicular to the sun. Instrument set-up is similar to that for Umkehr observations.

4. DAILY HOUSEKEEPING DETAILS

1

This chapter contains guidelines on routine care and maintenance of the Brewer system.

4.1 Daily Checks (assuming schedule operation is in progress):

Clean the window and dome each morning and check pointing accuracy if convenient. Confirm the correct date, time, adequate bytes free on the data disk for the next day. Of course the location and instrument number must be correct as well.

Inspect the summaries from the previous day by viewing the end-of-day hard copy printout or the average files. The SL test results are most important, especially ratios R5 and R6 which should stay consistent within ± 30 and ± 15 units respectively. The HGSUM data should be scanned as well for any micrometer problems. The DT results should be within nominal readings (± 5 ns). The RS ratios for operating wavelengths 2-7 should be better than $\pm 0.3\%$. The main power supply $\pm 5v$ should be ± 4.95 to ± 5.1 volts. Lamp intensities should be noted to detect any deterioration. Note the HG lamp intensity changes a great deal with temperature.

The pointing accuracy may be checked while in a schedule, during a DS measurement by viewing that the sun's image is not on the IRIS. If it is then a SI (sighting) should be performed. Corrections should be noted to ensure good installation (i.e. level) and tracking operation. Before performing SI it may be necessary to do a RE or AZ to confirm a new sighting is actually required, please note the azimuth discrepancy after this test. Perform the steps per revolution SR test weekly. This may show that the tracker drive wheel needs to be cleaned.

4.2 Other Notes on some possible problems:

There may be occasions when one or both micrometers will have to be reset by hand so become familiar with its normal setting. This problem may occur if the constants for DIODE OFFSET and MIC STEPS/DEG are not correct or if the mechanism becomes sticky.

In the main menu a quick test to check if Brewer is communicating to the computer is TE, temperature check, or TI for checking time. If nothing happens then do a RE (reset) or if you cannot return to the menu then press Control-Break and type RUN, or do a complete boot-up. Note: after returning from DOS if you used the SHELL command then type a TI (timer set) command to help ensure proper operation.

The printer can get turned off by the program if the paper runs out or jams. If this happens the PN command will have to be issued. This is why its important to program this command into schedules for the most important times of the day, especially at the end of the day. When the printer is off the measurements default to the screen. The PF command turns the printer off.

The data recording can get turned off by a disk recording problem or a full disk. The message "DISK TURNED OFF" shows up on the screen and the DI command must be issued. It is recommended that you back up or archive your data weekly.

4.3 Designing schedules and processing data without the Brewer:

There is a solar angle routine (SA) which will print out the solar and lunar zenith angles and airmass values versus time. This routine aids in making schedules.

Reference Chapter 2, Command Summary that only two letter commands and those marked DAILY can be used in schedules. Also in schedules there can not be any typing errors since the schedule will stop and return to the menu.

To insert and delete lines in schedules or location file the key ^ (shift 6 on North American keyboard) must be pressed and the character appears in the upper right of the table. When finished then press shift 6 again to remove the indicator.

Some standard schedules are provided with each Brewer. To see what the names are issue a SKC or SK command and all the available schedules will be shown on the screen. Then press RETURN to return to menu. To view or edit a schedule, select schedule edit SE command and type the name of the schedule. Note: Umkehr schedules may often have to be adjusted for the seasons, especially at high latitudes.

If operation without the brewer is desired, then use the IC command to enable NOBREW mode operation. This mode will remain enabled until it is disabled with the IC command.

Approximate run times for the following measurements are shown below:

HG (without B1)	7-9 min.		
SL(without B2)	9 min		
DS	3 min		
ZS	4 min		
UV	8 min		
ux	9 min		
UM	Indeterminate must be aborted with		
	HOME key or new schedule entry.		
FM	11 min		

4.4 Field Definitions of Data Files

)

This section describes the data field structures of the various files generated by the Brewer Ozone Spectrophotometer. Most of the Brewer data is stored in the daily B-file (Bdddyy.###) opened at the start of each day. The UVB scan data is stored in it's own UV-file (UVdddyy.###) each day. The end of day (ED) process creates two extra files from the B-file, namely the S-file (Sdddyy.###) and the U-file (Udddyy.###) which contains re-processed Umkehr data for the day. Summary statistics of atmospheric observations and instrument performance tests are written to various average files (???AVG.###).

4.4.1 B file structure: Bdddyy.###

Bdddyy.### files always begin with the characters *version*. The beginning of a B file always contains three sections: the version string, the instrument constants, and a data header. All items are separated by a carriage return (ASCII 13 decimal), and all sections are separated by a carriage return-linefeed pair (ASCII 13, 10 decimal). The following pages describe the format of each B file section.

Note that older B file formats did not contain a version string section or an instrument constants section. If no version string section exists, assume the file to be version 0.

Also, note that most processing programs search for the *summary* and *n2summary* headers first.

4.4.1a Version String

version=1 version string, number after the equals sign is the version number

4.4.1b Instrument Constants

Note that this section of the file format is identical to the ICFVAL.nnn file in the instrument data directory.

inst	basic instrument constants		
0	ozone temperature coefficient for slit 1		
-2.949	ozone temperature coefficient for slit 5		
0	micrometer steps per degree		
.3461	ozone on ozone ratio		
2.35	SO2 on SO2 ratio		
1.1565	ozone on SO2 ratio		
3448	ETC on ozone ratio		
3558	ETC on SO2 ratio		
.000000044	dead time (seconds)		
292	wavelength calibration step number		
78	slit mask motor delay		
1777	Umkehr offset		
0	neutral density of filter 0		
5000	neutral density of filter 1		

	•
25000	neutral density of filter 5
2816	zenith motor steps per revolution
mkii	Brewer model type (one of mkii, mkiii, or mkiv)
1	COM port number
0	ozone temperature coefficient for mercury exit slit
0	NO2 temperature coefficient for mercury exit slit (MKIV only)
0	NO2 temperature coefficient for slit 1
	:
0	NO2 temperature coefficient for slit 5
1885	ozone micrometer offset
2310	ozone micrometer #2 offset (MKIII only)
242	ozone filterwheel #3 position
3	NO2 absorption coefficient (MKIV only)
745	NO2 direct sun ETC (MKIV only)
742	NO2 zenith sky ETC (MKIV only)
5089	NO2 micrometer offset (MKIV only)
178	NO2 filterwheel #3 position (MKIV only)
3204	ozone/NO2 mode change distance for micrometer (MKIV only)
.996	grating slope (MKIII only)
1.901	grating intercept (MKIII only)
3469	micrometer zero position
75	number of motor steps to open iris
0.2	computer buffer delay (larger numbers for faster computers)
64	NO2 filterwheel #1 position (MKIV only)
256	ozone filterwheel #1 position
0	filterwheel #2 position
64	UV filterwheel #2 position

)

40 number of steps from zenith sensor to the hard stop Note that this section of the file format is identical to the DCFVAL.nnn file in the instrument data directory.

disp

dispersion constants

2797.237

intercept for slit 1

.07283272

slope for slit 1

-.00000057826 quadratic for slit 1

2837.617

intercept for slit 2

.07210223

slope for slit 2

-.00000058722 quadratic for slit 2

2945.481

intercept for slit 5

.06988658

slope for slit 5

-.00000060847 quadratic for slit 5

2755.701

intercept for mercury exit slit

.07597

slope for mercury exit slit

-.00000064887 quadratic for mercury exit slit

2797.237

NO2 intercept for slit 1

.07283272

NO2 slope for slit 1

-.00000057826 NO2 quadratic for slit 1

2837.617

NO2 intercept for slit 2

.07210223

NO2 slope for slit 2

-.00000058722 NO2 quadratic for slit 2

2945.481

NO2 intercept for slit 5

.06988658

NO2 slope for slit 5

-.00000060847 NO2 quadratic for slit 5

2755.701

NO2 intercept for mercury exit slit

.07597

NO2 slope for mercury exit slit

-.0000064887 NO2 quadratic for mercury exit slit

Note that this section of the file format is identical to the ZSFVAL.nnn file in the instrument data directory.

zeni

zenith sky coefficients

-.0064

coefficient #1

-.01968

coefficient #2

.

-.04506

coefficient #9

4.4.1c Data Header

)

dh

header

13

day

08

month

92

year

Lindenberg

location name

52.21

latitude

-14.12

longitude

3.45

temperature in volts

pr

pressure

1000

pressure value

4.4.1d Comment Block

CO

section type (comment block)

13:20:00

time comment was logged

user: text

source of comment (user, hg, ze, az, etc.)

always followed by a colon and space

always followed by the comment text

4.4.1e Mercury Lamp B file data

hg

type of measurement

12:10:22

time of measurement

.9988

correlation value

140.7029

HG calculated at step #

	141	micrometer set to this #					
	2306	intensity counts at peak					
	-6	temperature (deg. C)					
4.4.1f Standard La	amp B file data						
	sl	type of mea	asurement				
	а	filter					
	0	ND filter pos'n of filterwheel #2 (in steps)					
	737.41	time - minutes since 00:00 hrs					
	1	lower slit mask pos'n (1=dark)					
	6	upper slit mask pos'n (6=slit 5)					
	20	# of cycles					
	625382	raw counts wavelength #0					
	18	dark count					
	824502	raw counts wavelength #1					
	997920	raw counts wavelength #2					
	1189457	raw counts wavelength #3					
	1157092	raw counts wavelength #4					
	970701	raw counts wavelength #5					
	rat	ratio					
	1526	single ratio #1 MS(4)					
	668	single ratio #2 MS(5) single ratio #3 MS(6)					
	-125						
	-786	single ratio	#4 MS(7)				
Repeat	t the above 6 mo	re times					
	sl	sl	sl	sl	sl	sl	
	a	а	а	а	a	а	
	0	0	0	0	0	0	
	737.99	738.57	739.15	739.72	740.3	740.88	
	1	1	1	1	1	1	
	6	6	6	6	6	6	

	20	20	20	20	20	20
	625382	625382	625382	625382	625382	625382
	23	22	26	25	27	22
	825466	824976	825114	824566	825258	825100
	999513	999049	999304	1000116	999945	9999188
	1190104	1189807	1190117	1190470	1187989	1190572
	1157236	1156718	1156800	1157347	1157486	1157390
	970886	9720 97	972494	971723	971187	971521
	rat	rat	rat	rat	rat	rat
	1521	1521	1521	1526	1523	1523
	662	662	661	659	661	664
	-127	-128	-128	-128	-118	-128
	-786	-778	-777	-782	-786	-784
Summary						
	12:19:09	time				
	mar	month				
	08/	day				
	92	year				

mean zenith angle during measurement 104.612

3.777 mean airmass

-6 temperature (deg. C)

type of measurement sl

ND filter pos/n (in steps) 0

mean single ratio #1 R1 MS(4) 1523

662 mean single ratio #2 R2 MS(5)

mean single ratio #3 R3 MS(6)

-783 mean single ratio #4 R4 MS(7)

2056 mean double ratio #2 R6 MS(9)

mean of counts from wavelength #1 824997.5

mean double ratio #1 R5 MS(8)

-126

4028

	971515.6	mean of counts from wavelength #5
	2	st'd dev. single ratio #1
	3	st'd dev. single ratio #2
	4	st'd dev. single ratio #3
	4	st'd dev. single ratio #4
	13	st'd dev. double ratio #1
	8	st'd dev. double ratio #2
	387	st'd dev. counts wavelength #1
	632	st'd dev. counts wavelength #5
4.4.1g Direct Sun	B file data	
	ds	type of measurement
	a	filter
	64	ND filter position of #2 Filterwheel (in steps)
	978.87	time - minutes since 00:00 hrs
	1	lower slit mask position (1=dark)
	6	upper slit mask position (6=slit 5)
	20	# of cycles
	625382	raw counts wavelength #0
	11	dark count
	13879	raw counts wavelength #1
	345676	raw counts wavelength #2
	437926	raw counts wavelength #3
	728264	raw counts wavelength #4
	805262	raw counts wavelength #5
	rat	ratio
	15671	single ratio #1 MS(4)
	8345	single ratio #2 MS(5)
	2820	single ratio #3 MS(6)
	1	single ratio #4 MS(7)

Repeat the above 4 more times

ds ds ds ds

Summary

16:20:02 time

mar month

08/ day

92 year

68.024 zenith angle

2.617 airmass

-5 temperature (deg. C)

ds type of measurement

1 ND filter pos'n

15578 single ratio #1 MS(4)

8312 single ratio #2 MS(5)

2801 single ratio #3 MS(6)

-5 single ratio #4 MS(7)

15594 double ratio #1 MS(8)

6920 double ratio #2 MS(9)

.3 SO₂ value MS(10)

404.4 O₃ value MS(11)

71 st'd dev. single ratio #1

28 st'd dev. single ratio #2

16 st'd dev. single ratio #3

5 st'd dev. single ratio #4

56 st'd dev. double ratio #1

11 st'd dev. double ratio #2

.4 SO₂ st'd dev.

.6 O₃ st'd dev.

4.4.1h Zenith Sky B file data

zs type of measurement

)

	а	filter				
	0	ND filter pos'n in filter wheel step # co-ord's				
	974.43	time - minutes since 00:00 hrs				
	1	lower slit mask position				
	6	upper slit m	upper slit mask position			
	20	# of cycles				
	625382	raw counts wavelength #0				
	4	dark count				
	10125	raw counts	wavelength	#1		
	48805	raw counts	wavelength	#2		
	164527	raw counts	wavelength	#3		
	306533	raw counts wavelength #4 raw counts wavelength #5				
	311495					
	rat	ratio Single ratio #1 MS(4)				
	14857					
	8021	single ratio	#2 MS(5)			
	2727	single ratio #3 MS(6)				
	79	single ratio #4 MS(7)				
Repea	t the above 6 tim	nes				
	zs	zs	zs	zs	zs	zs
	а	а	а	a	а	а
	0	0	0	0	0	0
	975.01	975.58	976.15	976.73	977.3	977.87
	1	1	1	1	1	1
	6	6	6	6	6	6
	20	20	20	20	20	20
	625382	625382	625382	625382	625382	625382
	5	5	5	4	7	3

)

	166161	166921	168078	169687	170584	171559
	308330	309775	311554	313718	315586	316859
	312878	314465	316279	318418	319538	321391
	rat	rat	rat	rat	rat	rat
	14782	14761	14730	14760	14744	14667
	8038	8011	8030	7982	7977	7964
	2709	2710	2705	2694	2697	2689
	72	74	74	73	63	70
Sumn	nary					
	16:16:09	time				
	mar	month				

16:16:09	time
mar	month
08/	day
92	year

68.477	zenith angle	
0.667	oir mace	

00.477	zeniai angic
2.667	air mass
-5	temperature (deg. C)
zs	type of measurement
0	ND filter position
14757	single ratio #1 MS(4)
8003	single ratio #2 MS(5)
2704	single ratio #3 MS(6)
72	single ratio #4 MS(7)
14526	double ratio #1 MS(8)
6528	double ratio #2 MS(9)
-48.6	SO ₂ value MS(10)
404.8	O ₃ value MS(11)

double ratio #2 MS(9)
SO ₂ value MS(10)
O ₃ value MS(11)
st'd dev. single ratio #1
st'd dev. single ratio #2
st'd dev. single ratio #3
st'd dev. single ratio #4

57

29

13

5

)

}

st'd dev. double ratio #1

st'd dev. double ratio #2

3.2 SO₂ st'd dev.

O₃ st'd dev.

4.4.2 UMKEHR raw data file structure: in B file

UMKEHR raw data is also stored in the B file with a similar structure as the ZS data, excluding the summary data. The UM data is re-processed as part of the SUM command. The following is one measurement at one set of wavelengths (short first):

ma	mand. The following is one measurement at one set			
	um	type of measurement		
	240592	date		
	Santa Maria	location name		
	-29.69	latitude		
	53.728	longitude		
	3.49	last temperature		
	pr1000	pressure		
	0	ND filter position		
	1157.87	time - minutes since 00:00 hrs.		
	1	lower slit mask position		
	6	upper slit mask		
	40	# of cycles		
	625382	raw counts wavelength #0		
	120	dark count		
	97706	raw counts wavelength #1		
	294523	raw counts wavelength #2		
	759956	raw counts wavelength #3		
	1087648	raw counts wavelength #4		
	962462	raw counts wavelength #5		
	rat	ratio		
	105525	single ratio #1 MS(4)		
	5722	single ratio #2 MS(5)		

1572 single ratio #3 MS(6)

-574 single ratio #4 MS(7)

the long wavelengths are measured and stored in the same format. These long wavelengths correspond to approximately: 316.8, 320.1, 323.2, 326.4, 329.5nm. The short/long wavelength measurement sequence is repeated for as long as the UM command is engaged.

4.4.3 SUMMARY file structure: Sdddyy.###

Sdddyy.### files start with 'tc' and the 5 temperature coeff's which were in the instruments constants file when the SUM command was issued. The SUM command is normally performed as the first command in the ED end of day sequence. Listed below is the structure as described with an HG test followed by the end of file designator. Each item in a S-file is separated with a carriage return and line feed.

tc

.9283

1.178

.74

O

-1.413

hg

)

14:40:47

.988

147.43

133

1469

27

ef

Reference the B-file descriptions above for the DS, ZS, SL etc. measurements. Fields after and including the 'summary' statement are written into the S-files.

4.4.4 UV file Structure: UVdddyy.###

UX integration time is 0.2294 seconds per cycle (header for each scan).

dt 4.3E-08 dead time
cy 1 # of cycles
dh data header
26 day

)

^{*1-4} repeat for wavelengths 2865-3630 Angstroms at 5A increments. A UV measurement is from 2900-3250-2900 Angstroms in 5A increments and # of cycles is 4 and counts for 4 cycles are recorded in the UV file. UF, UA scans have file structures that are the same or similar to UX file structure.

4.4.5 Average files structure: ???avg.###

These files contain daily statistical data or individual measurement results. The tabled structure of these files allows easy loading into any spreadsheet or statistical software for further analysis.

OZOAVG.###	SLOAVG.###
HGOAVG.###	APOAVG.###
RSOAVG.###	DTOAVG.###
FMOAVG.###	FZOAVG.###
OPAVG.###	MIOAVG.###
SCOAVG.###	

The above files (excluding AP, DT, RS, SC, MI) are created from the ??sum.rtn indicated by the first two letters of the average file. The exceptions are created from the ??.rtn indicated by the first two letters of the average file. The opoavg.### file

is created by the ED.RTN and also records the op-st.### file whenever IC command is used. Examples of the average files along with field descriptions are as follows:

OZOAVG.###

08391 452.1 +2.4 -0.6 0.6 16/29 185 20 445.2 +5.2 -12.3 26.4 19/22 199 19 08491 472.8 +2.1 - .08 1.2 22/35 185 19 465.5 +5.8 -7.3 25.1 16/20 190 19

08591 458.8 +9.3 -0.7 0.6 12/35 192 18 461.7 +7.2 -5.7 23.2 16/20 184 19 julian day & year (dddyy), mean daily total column direct sun (ds) ozone, ds ozone standard deviation, mean daily total column ds sulphur dioxide, ds SO₂ standard deviation, number of good observations, number of total observations, harmonic mean of airmass for the measurements comprising the daily mean ozone, hour (GMT) that best represents the mean time for the mean daily ozone. The remaining fields are zenith sky data and have the same definitions as the ds data.

SLOAVG.###

06791 14 32 5 1705 815 -29 -702 3952 2023 581925 1 1 1 2 4 2 10848 06891 24 35 4 1707 815 -29 -703 3957 2026 572599 4 2 2 1 1 1 6619

06991 25 31 2 1706 815 -30 -700 3948 2021 576789 1 1 0 1 2 1 6873 dddyy, low and high temperatures of the standard lamp test, number of sl tests, ratios 1 through 6, lamp intensity, standard deviation for ratios 1 through 6 and lamp intensity.

HGOAVG.###

08391	2592	33 18
08491	2330	25 20
08591	2483	34 22

dddyy, maximum lamp intensity of the days scans, high Brewer temperature of the days scans and number of scans.

RSOAVG.###

08391 1.0006 1.1667 1.0003 .9995 1.0005 .9999 .9991 .9997 .08491 1.0020 .9024 .9989 .9994 1.0001 .9992 .9998 .9996 dddyy, run/stop ratio for slit mask positions 0 through 7.

DTOAVG.###

04991 41.66 43.375 05991 41.69 43.276 dddyy, dead time for high and low intensities

APOAVG.###

08591 1566.80 5.17 1.61 08691 1555.86 5.17 1.61 dddyy, H.T. voltage, +5V, standard lamp circuit

FMOAVG.###, FZOAVG.###

05791 425.9 +4.8 3152.5 -0.2 1.3 189001.4 4 33 05891 403.1 +5.3 2909.1 2.6 4.8 1788953 3 34

dddyy, nightly mean ozone and its standard deviation, ETC, nightly mean SO₂ and its standard deviation, ETC, number of good observations, number of total observations.

MIOAVG.###

02791	28	133.69 6122	6124	5142	5144	-177	178
03791	22	136.02 6122	6124	5145	5144	-177	178
04991	25	135.01 6122	6123	5143	5144	-178	178
05991	16	134.45 6122	6121	5141	5144	-177	178

Temperature at time of test, pre-test mercury calibration step number, steps from operating position to zeroing diode, offset constant, Micrometer #2 steps from operating position, offset constant, FW#3 steps from operating position to offset constant.

OPAVG.###

ED, 017, ICFVAL, ZSFVAL, DCFVAL, 26, 03, 91, Saskatoon, 52, 108, 106.713, 960, 3.41,-1865, -8, 14671, 1, 1, 1, 1, 1, 1, 1, 1, 1, (1, 0, 0, 1, 1, 0, 0, 0,) skc, fa, 07:21:42

ED, 011, 1.669, 2, 8, disk, 26, 03, 91, Saskatoon, 52, 108, 106.713, 960, 3.5, -1865, -8, 14671, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 0, 0, 1, 1, 0, 0, 0,) skc, fa, 07:21:46

This data comes from the ED.RTN, as well as the SW.RTN, and is the contents of the op_st.fil. At the end is the time of recording.

SCOAVG.###

133.6 440.1 07590 22 1.971933 1 131.7 -.3 135 131.3 .1 137 07991 21 1.889433 2 134.5 418.1 1.804133 2 136.9 404.7 30 133.6 -.6 135 08791

dddyy, temperature, airmass, neutral density filter used, maximum step of scan, maximum ozone, minimum step of scan, minimum SO₂, HG cal pt.before scan.

Along with the average files is a routine (REP.RTN) to display the important instrument performance data. This routine will read the SLOAVG.###, HGOAVG.###, APOAVG.###, DTOAVG.###, MIOAVG.### and RSOAVG.### files and display results within a range of days specified by the operator. An asterisk will appear beside the respective run/stop and dead time data if results are outside of a specific range defined as normal.

this page left intentionally blank

)

5. HELP - WHEN THINGS GO WRONG

5.1 Typing Errors

)

)

If you make a typing error e.g. with a chain of commands then use the Backspace key. In schedules the Insert and Delete keys can be used.

If you wish to stop the program, type EX an press RETURN. You can restart the program by typing BREWER at the DOS prompt. If the program refuses to start, you will need to reboot the computer by pressing the 3 keys, Control, Alt, Del, simultaneously or by turning the PC power off and then on.

5.2 Power Failures

If only the Brewer loses its input power then the Brewer software will automatically prompt for a response. If this fails after five consecutive attempts, and if the PC was under menu operation, then you must press the Return key to initiate a reset of the Brewer electronics and zero motors. If the Brewer was in schedule operation, then the program will automatically initiate a reset of the Brewer and then re-start the original schedule. Similarly the system recovers automatically if the PC, the Brewer, or both have a power interruption.

this page left intentionally blank

6. Configuring the Control Computer

6.1 Introduction

)

)

This section explains how to set up the Brewer software on the control computer for the first time. It is assumed that SCI-TEC has neither recommended nor supplied the control computer.

The Brewer software is supplied on 3.5 inch disks, and is set up for dual-drive use on a IBM PC compatible computer with MS-DOS 3.1 or greater. IBM Basic or GW-BASIC is required to run this software.

If you wish to run this software from a hard drive, please read Sections 6.2, 6.3 and 6.4. If you intend to run from floppy disk only, please read Sections 6.2 and 6.4. For information on modifying the Brewer software, proceed to Section 6.5. Section 6.6 contains some other useful information about fixing setup problems.

6.2 File Organization

The floppy disk is organized into three subdirectories. The contents of these directories are as follows:

Directory	Files in Directory	Notes
١	autoexec.bat,	These are files needed to run the Brewer
	brewer.bat,	s/w. Section 6.4 explains how to
	config.sys	customize these files for your system.
∖BDATA	none	This directory contains all the Brewer
		data files. The default location can be
		changed as explained in section 6.4.
\BREWER	*.asc, *.bas, *.fil, *.rtn	These files make up the Brewer
		operating software and must all be
		stored in one directory
\DOS	various	This directory contains useful DOS utility
		programs which may or may not already
		be available to you. They are not
		necessary to run the Brewer software

6.3 Brewer Software Hard Drive Installation

Since the Brewer software supplied is set up to run from disk by default, some setup changes must be made. The following procedure explains how to properly set up the software:

1. If the control computer already has MS-DOS installed, proceed to Step 4; otherwise, continue with Step 2.