


CMF4 / CVF4 mounting instructions

The CMF4 mounting holes for the CVF4 are numbered 1, 2, 3 and 4

Numbers 1 and 4 are for top mounting

Numbers 2 and 3 are for downward (Albedo) mounting

The downward looking CVF4 ventilator inlet is protected (against precipitation) by the extension of the CMF4 mounting plate.

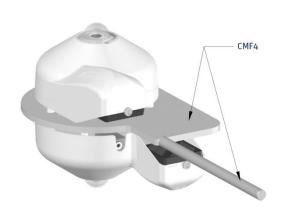

The CMF4 is supplied with 8 screws, the M6 x 20 are used for the CVF4 (CMF4 plate is 12 mm thick)

The CVF4 is mounted with 2 M6 x 20 screws, the other 2 feet are for stability but do not need screws

